

User Manual – Wakü telescope ladder

Height adjustment:

The inner, narrower part of the ladder is raised and lowered as the height is adjusted. Height can be adjusted both when using the product as a trestle ladder and when using it as a single ladder.



Pull the adjustment handles out on both sides (see picture). Raise or lower the inner part to the desired height and push the handles back in, making sure that they lock correctly. Locking is possible at each rung, as there are holes that allow the handle to be pushed into the inner ladder.

Standing on the ladder while height is being adjusted is not allowed. Make sure that the ladder stays balanced during adjustments so that it does not tip over.

The front and back of the ladder can be adjusted separately to allow working in a staircase, for example. When adjusting the height, make sure that the ladders are not tilted – the round joint part must point directly upwards (see the arrow in the picture).



Height adjustment handle is not properly locked.
Do not climb onto the ladder!



Height adjustment handle is correctly locked.
You can safely climb onto the ladder!

From a trestle ladder to a single ladder


Make sure that the height adjustment handles are properly locked before releasing the lock that allows the ladder to be converted from a trestle ladder to a single ladder.

Pull the locking pins located in the round hinges out on both sides of the ladder, far enough that they lock in the open position.



Locking pins open.
Do not climb onto the ladder!

Straighten the ladder by lifting one side up.

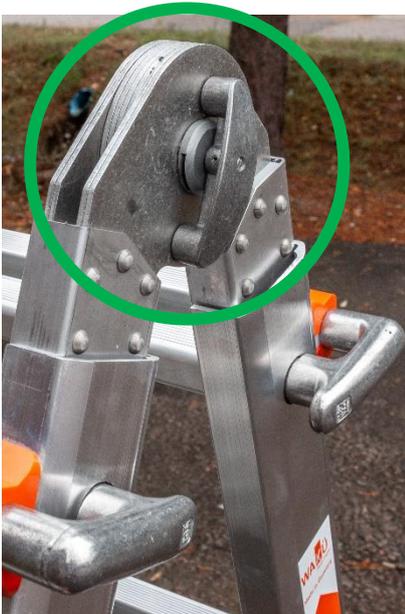

Lock the pins again before you climb the ladder. The lock should make a clicking sound.

Locking pin locked.
You can safely climb onto the ladder!