

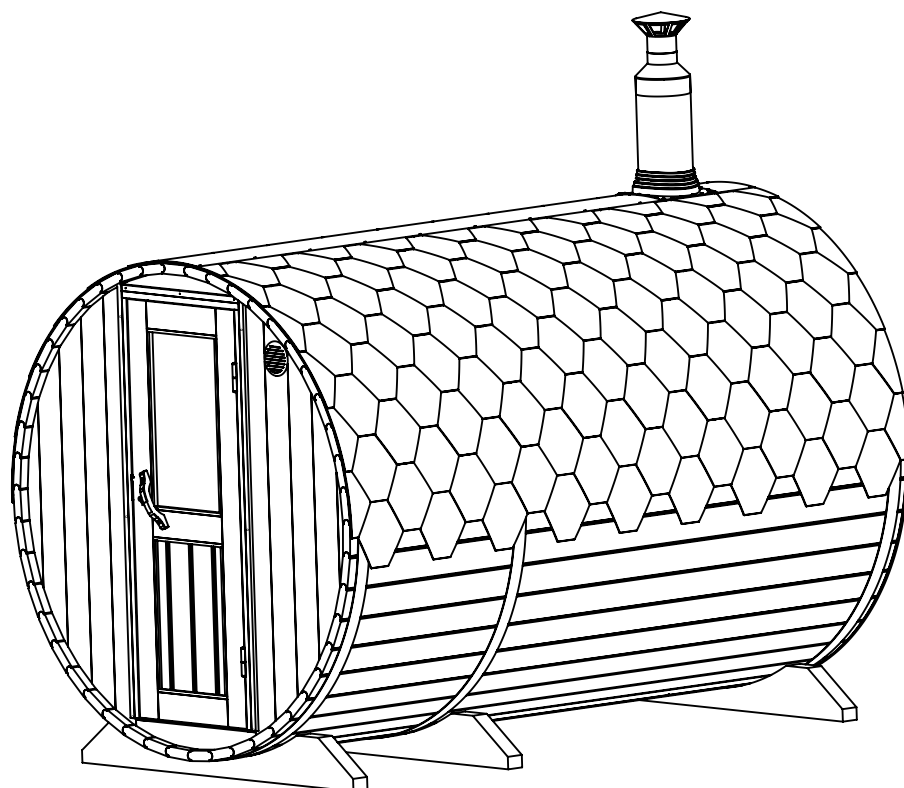






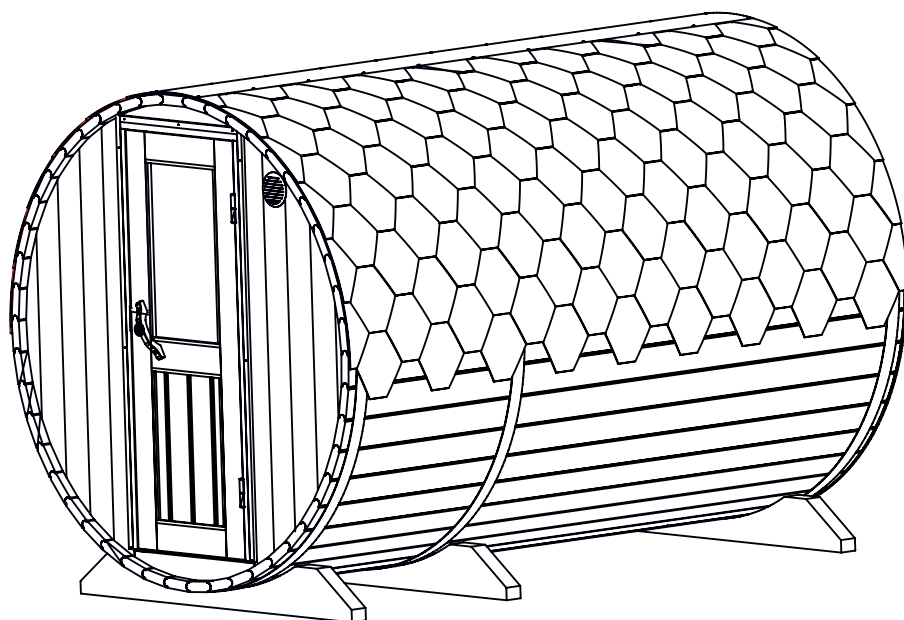






Assembly manual for sauna S3PE and S3PD

Required tools for sauna installation.





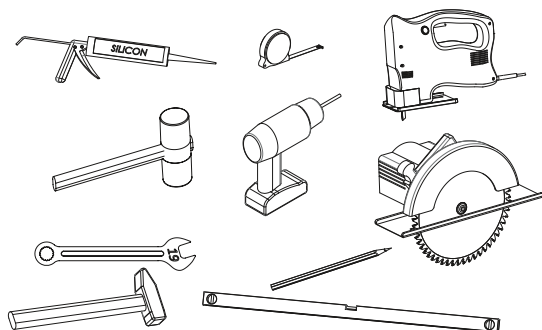



NB!

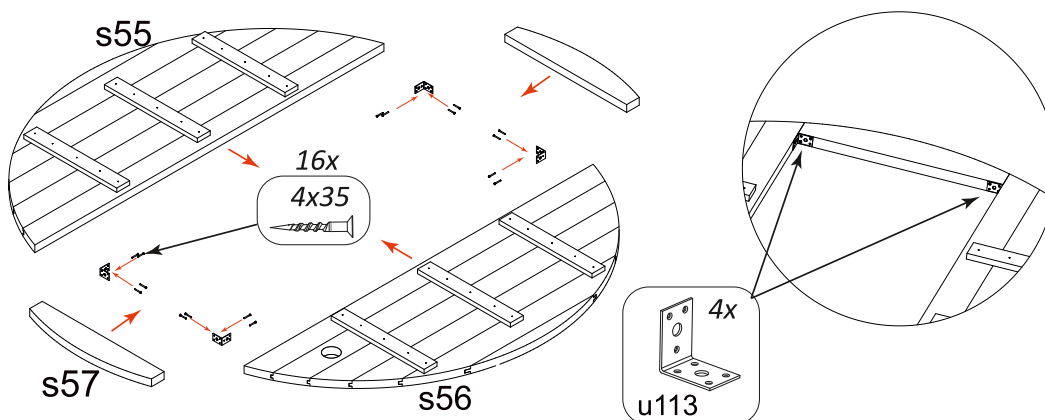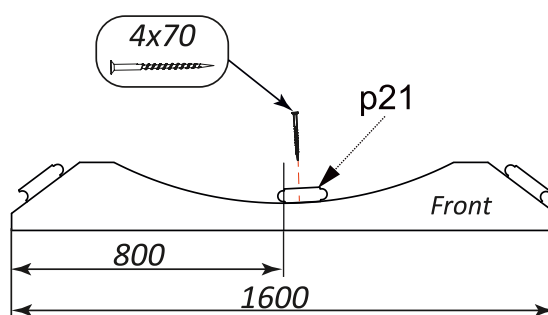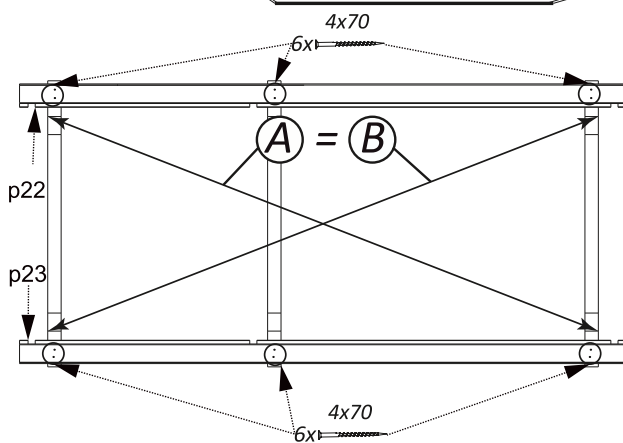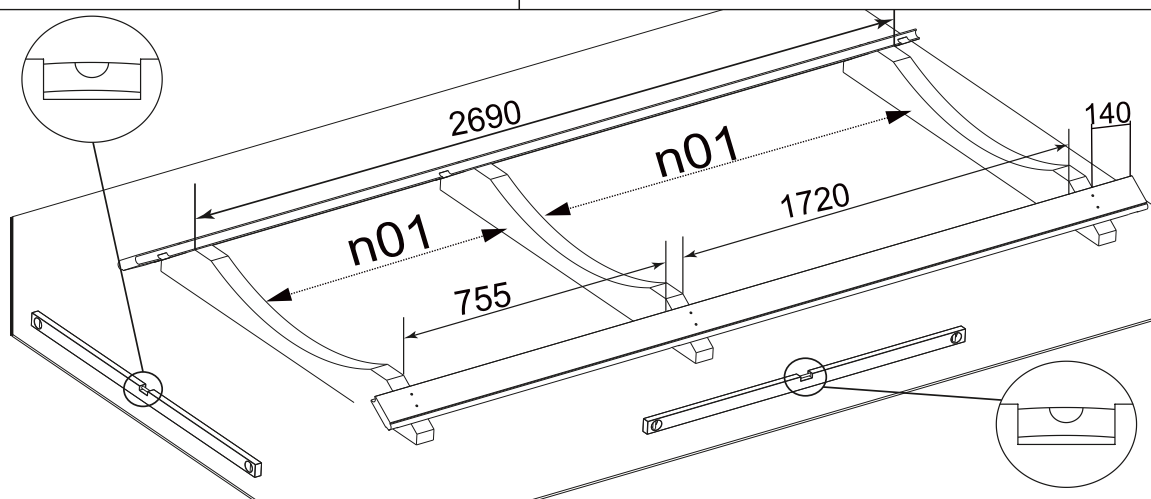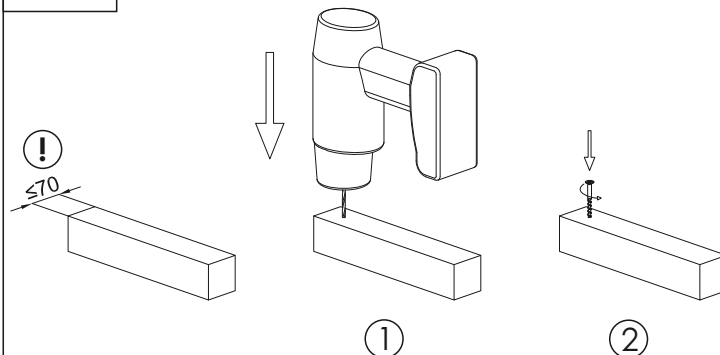

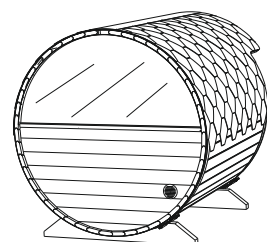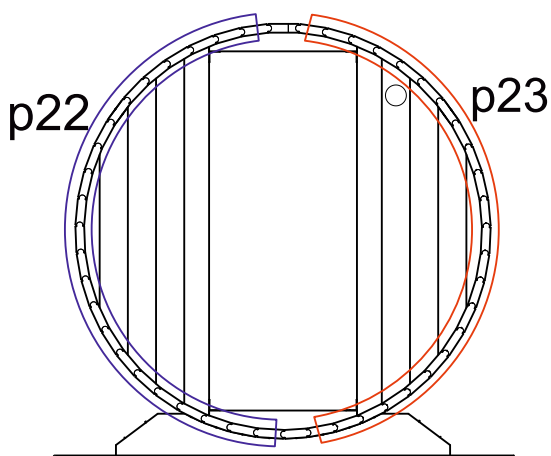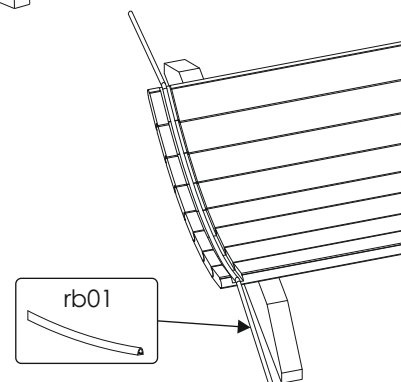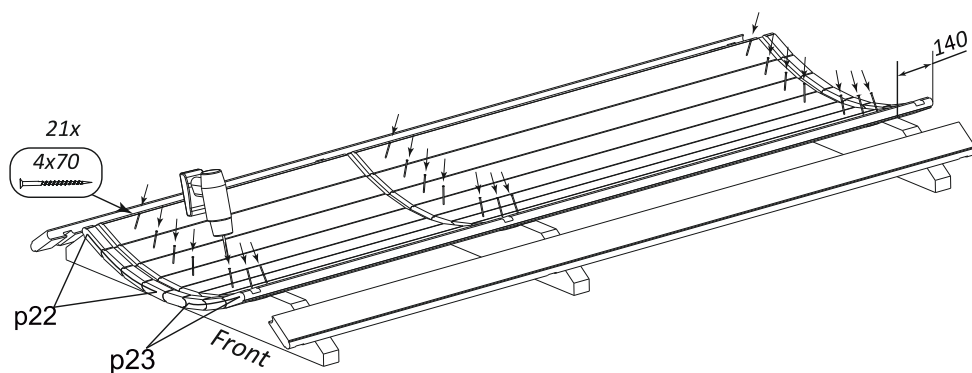


Note! See "Assembly manual for window" for a panoramic window installation

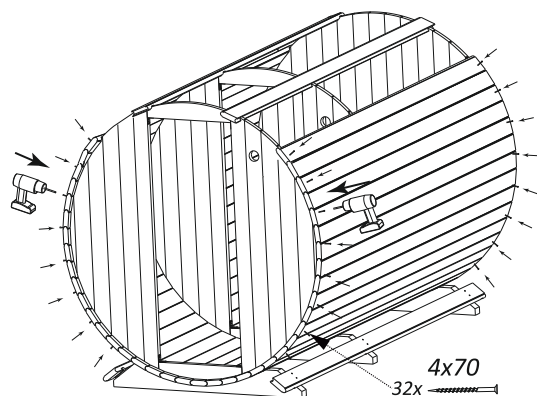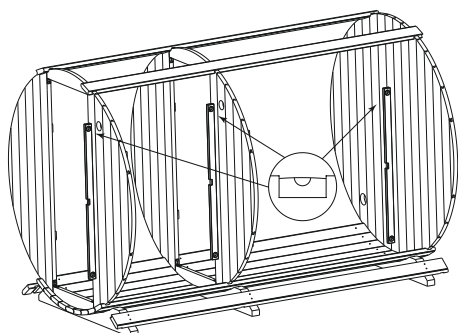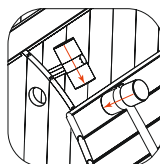
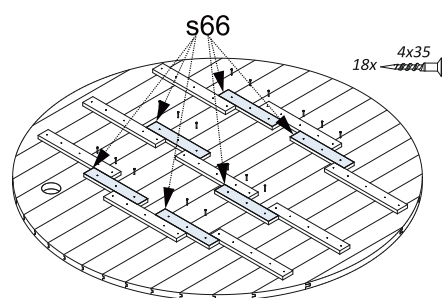
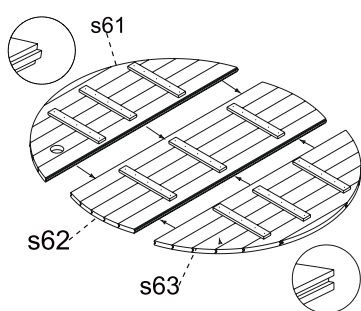


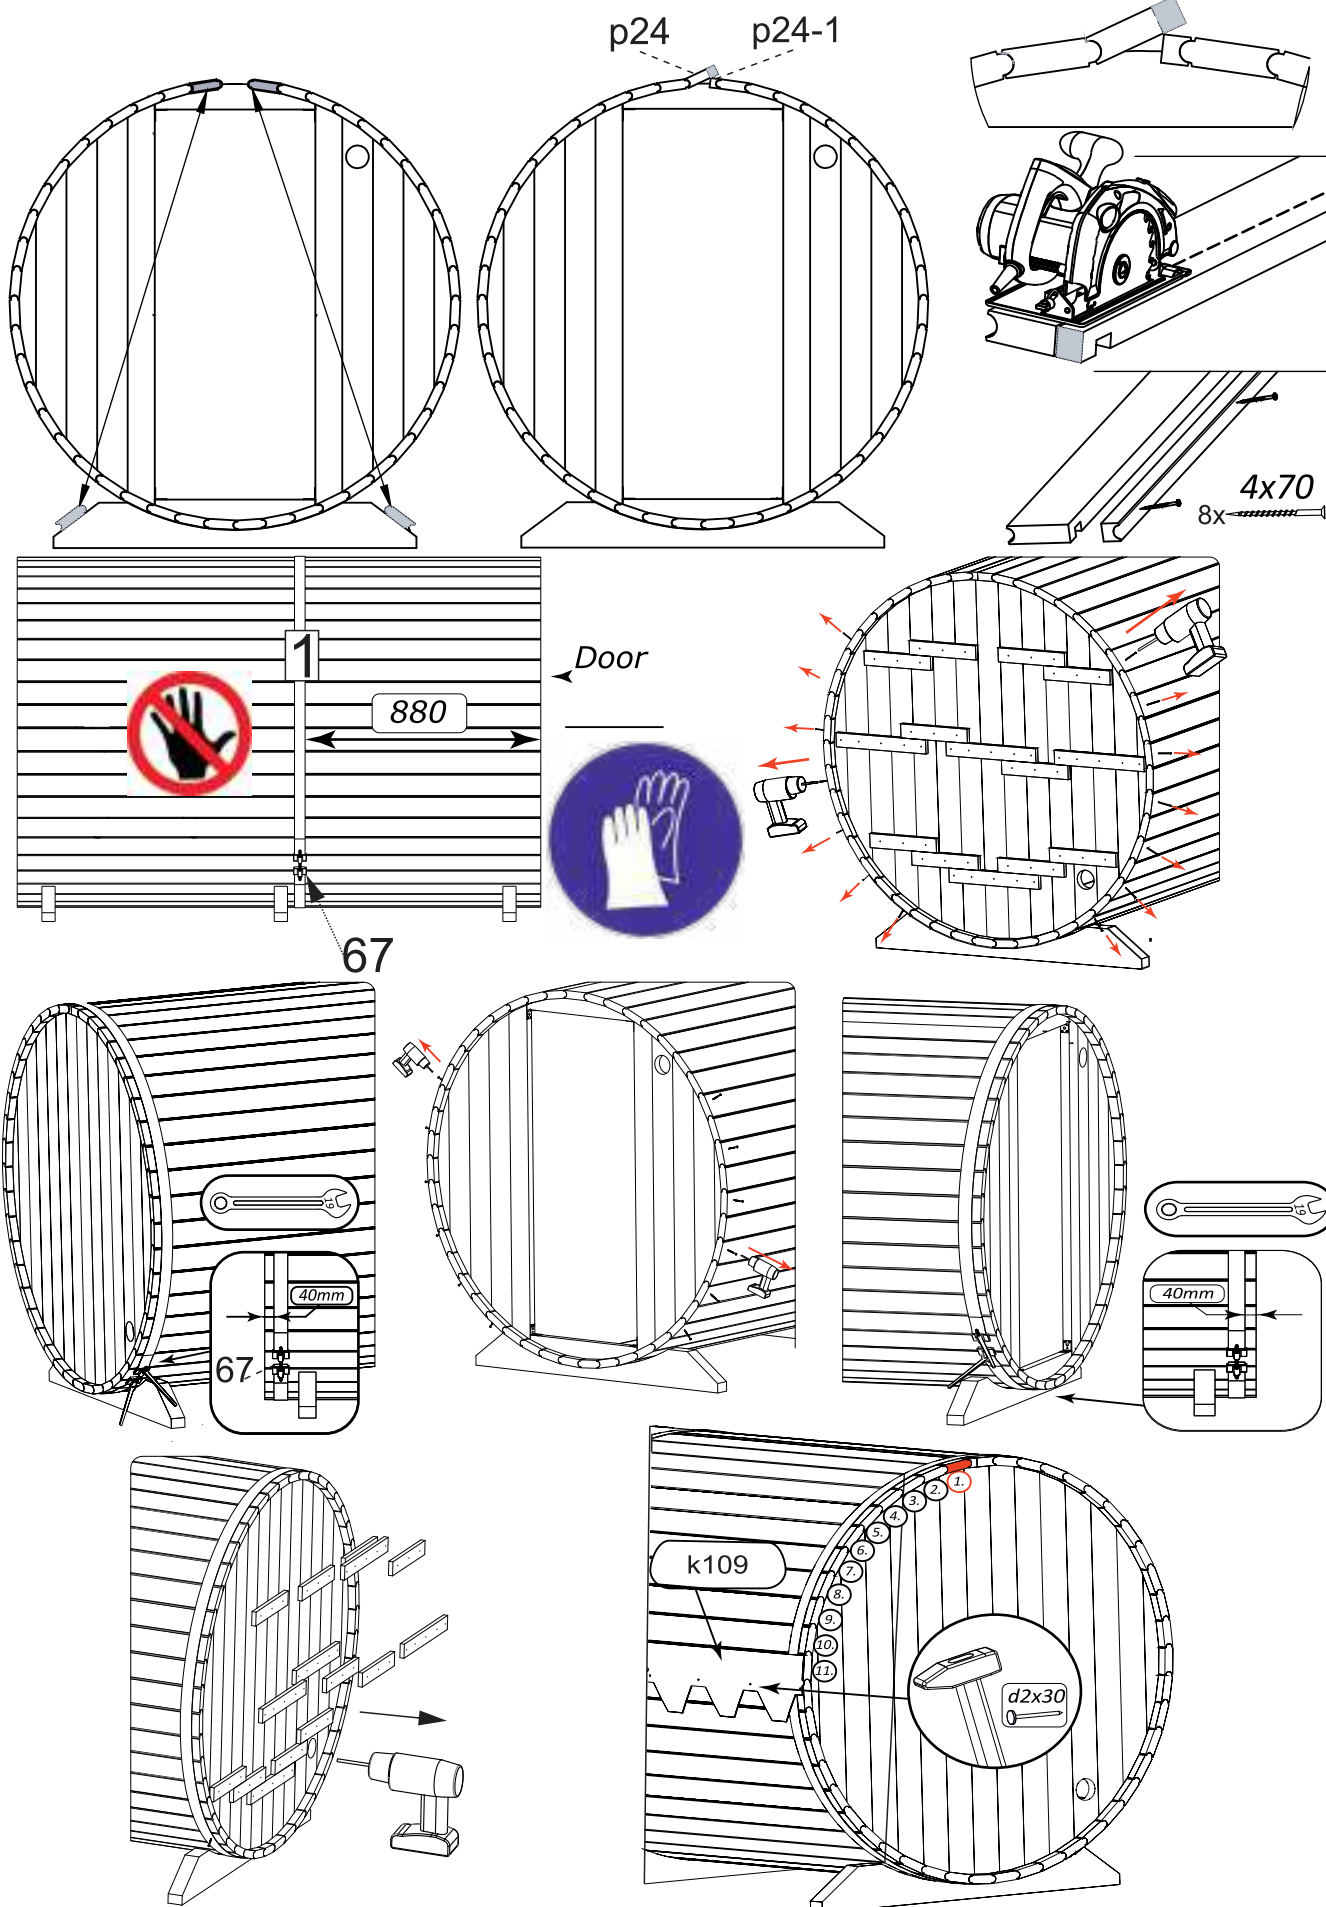



S3P without canopy

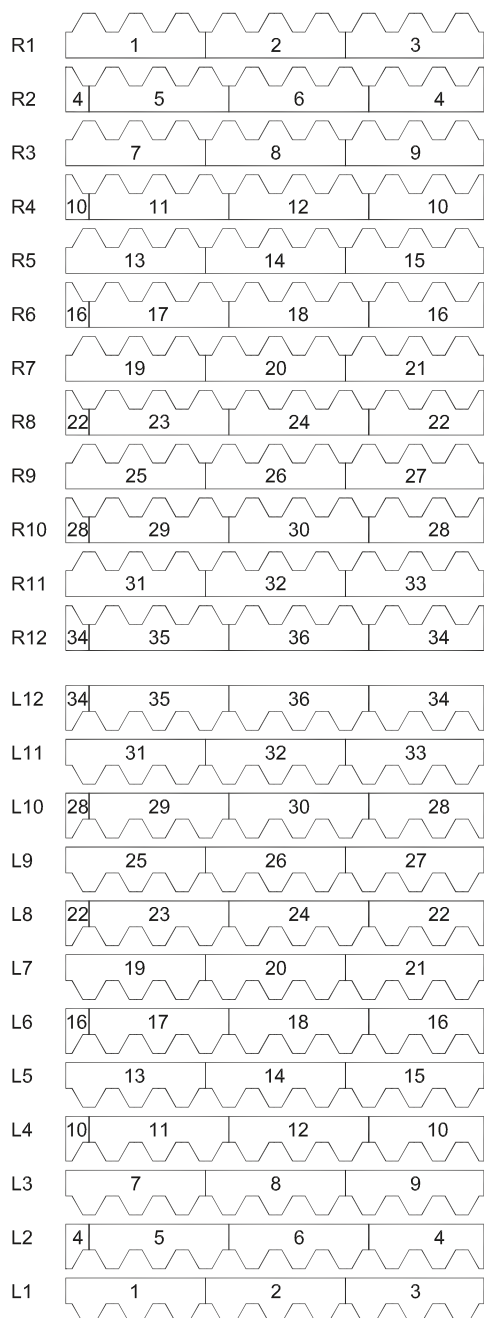






S3P with canopy

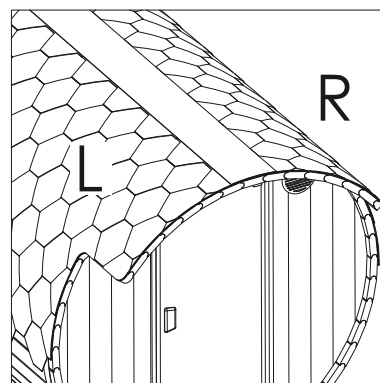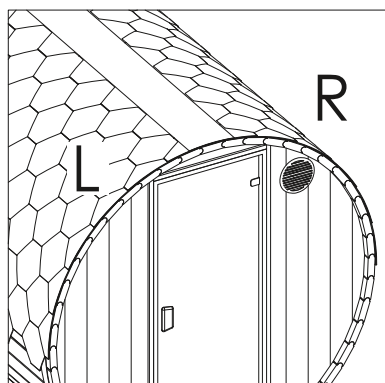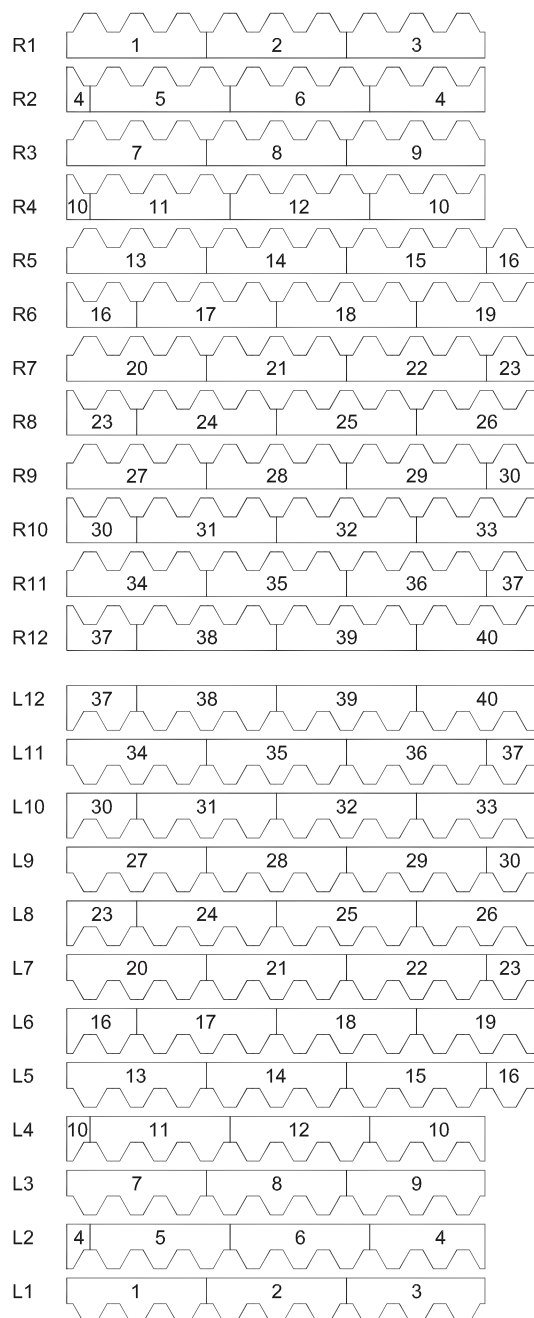

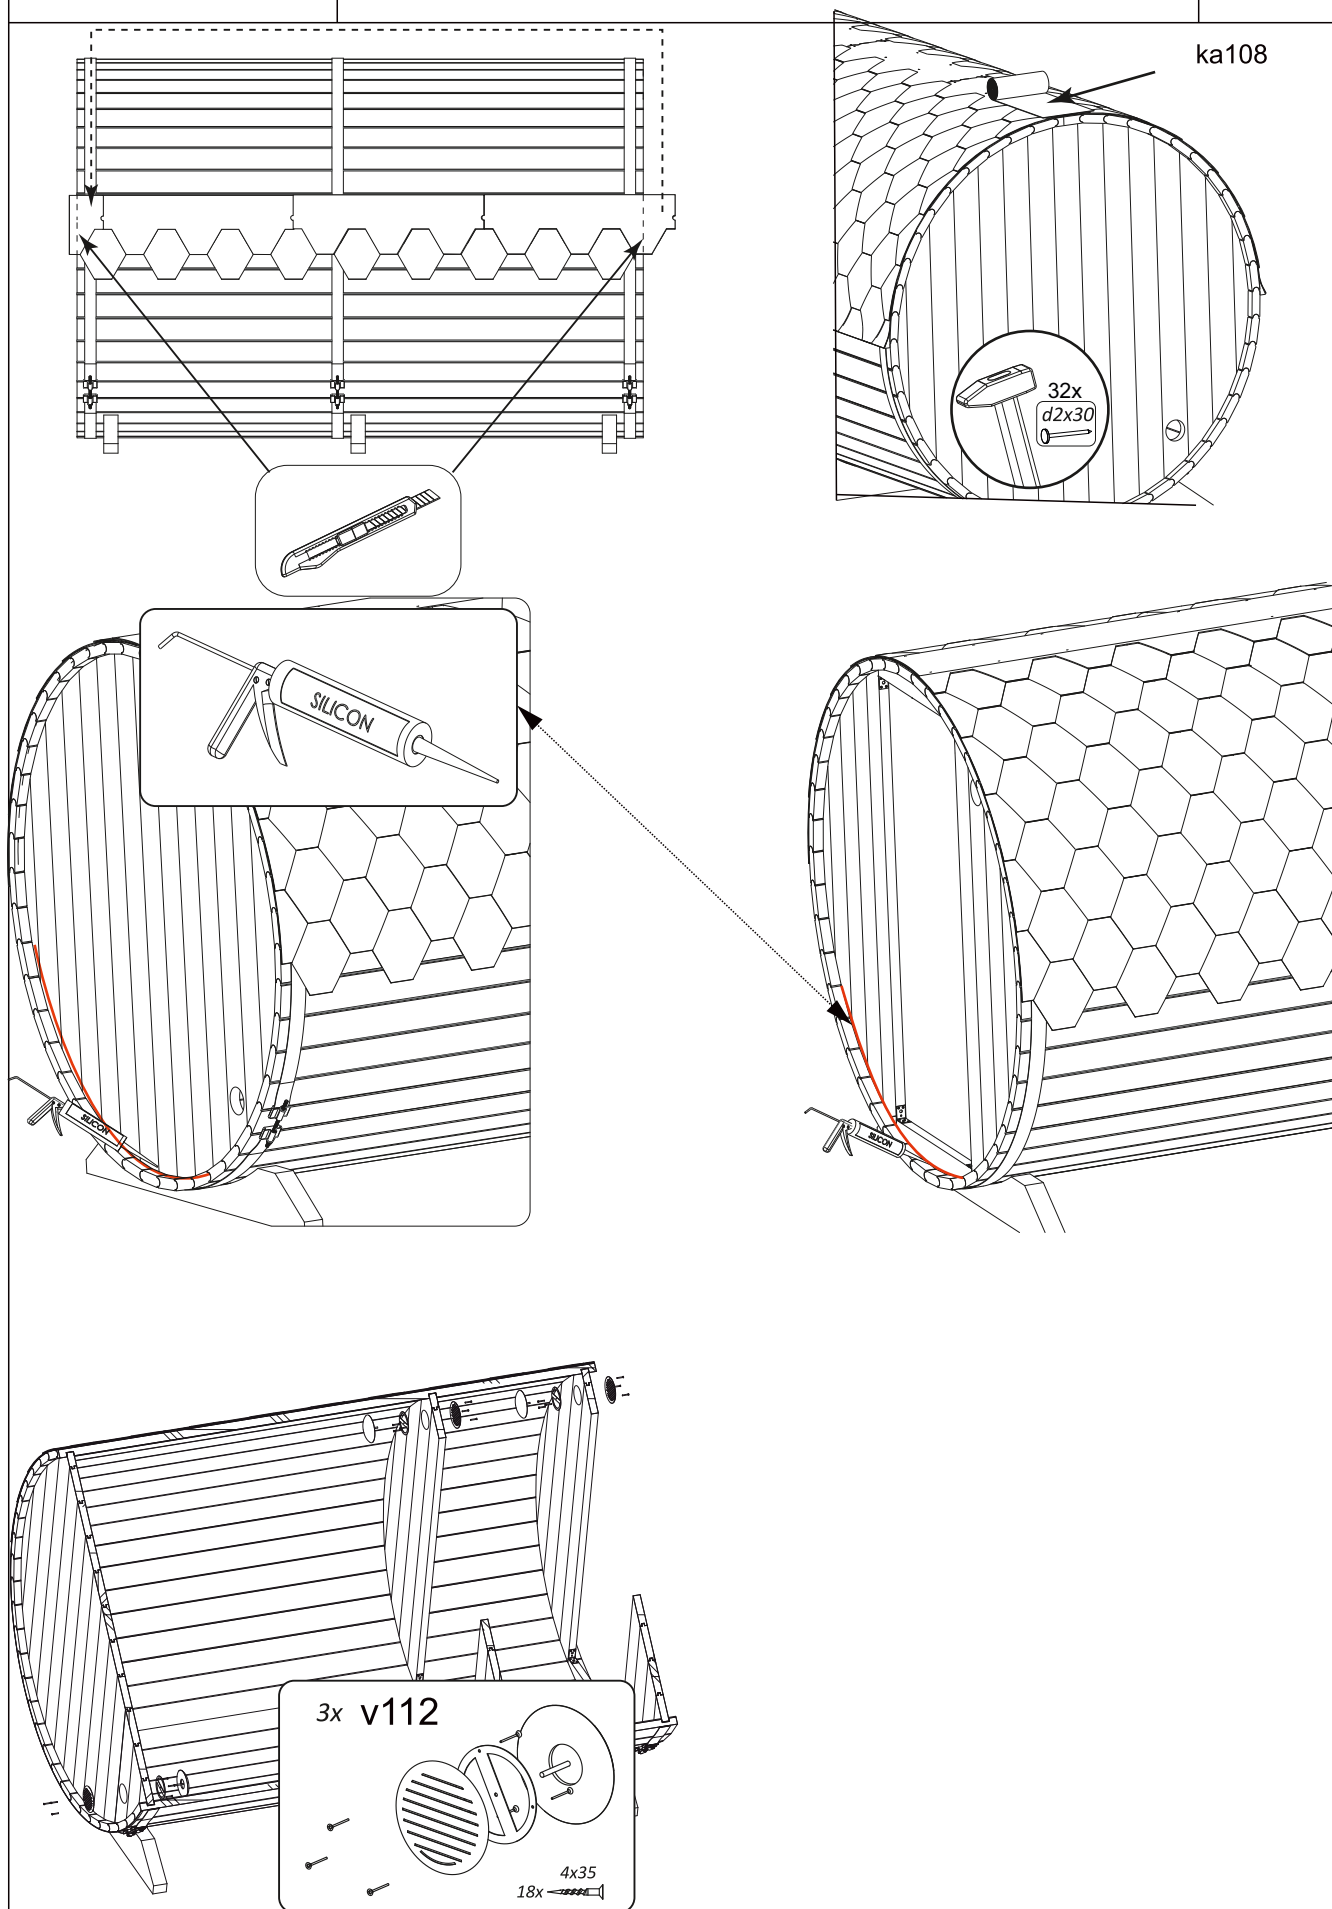


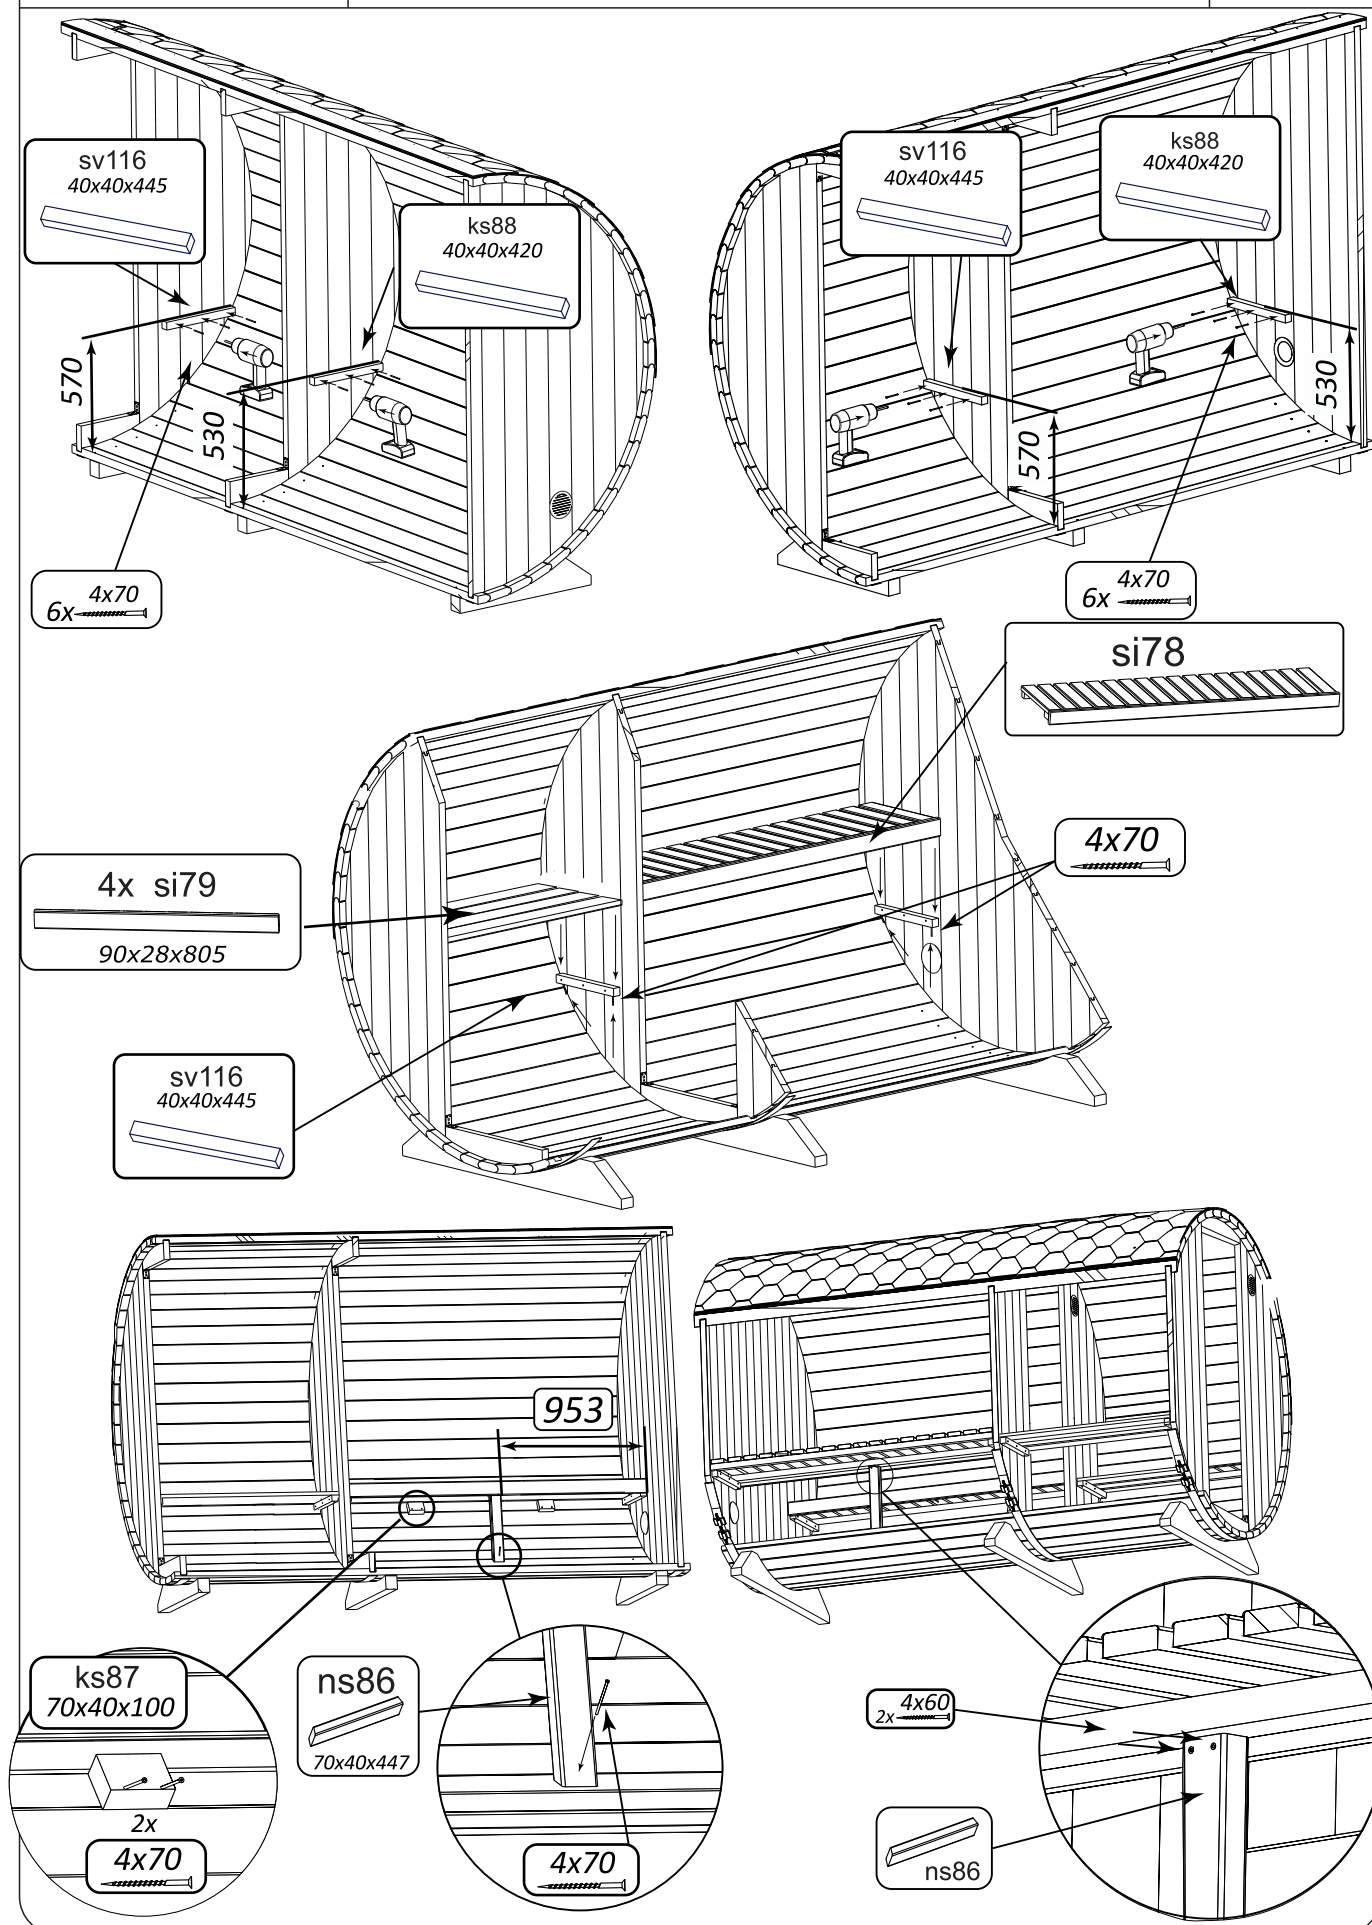

Wooden door d105

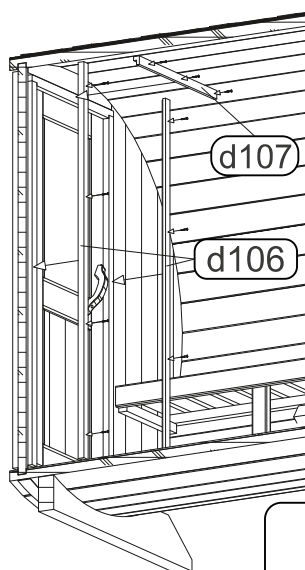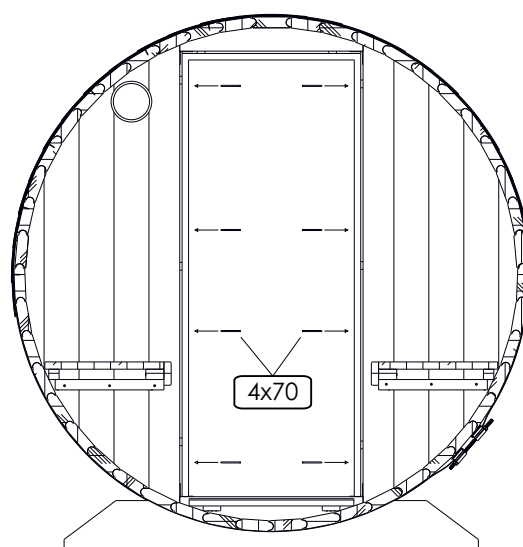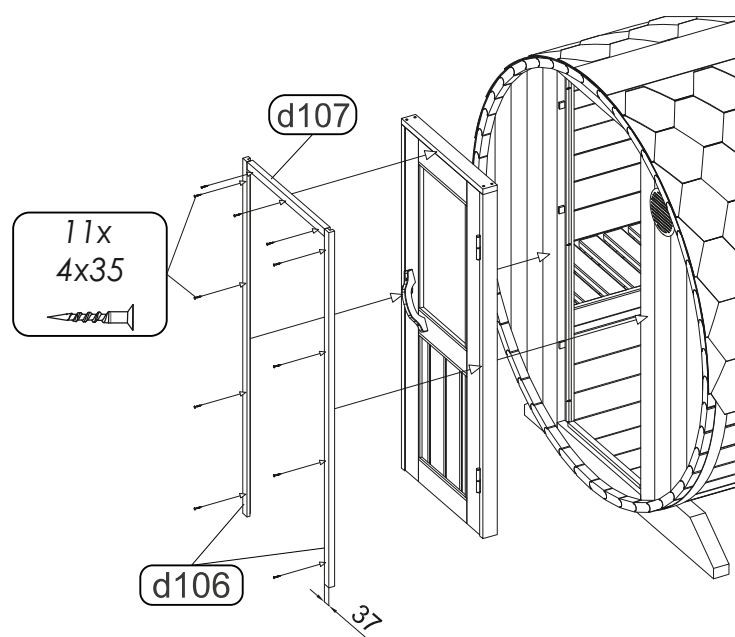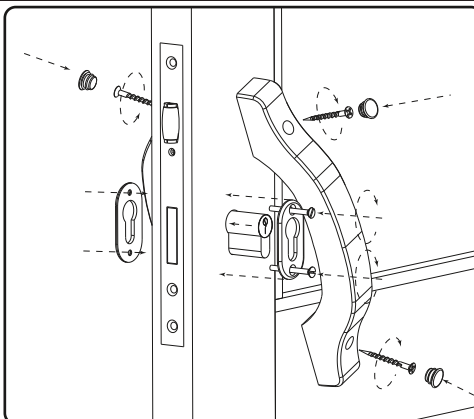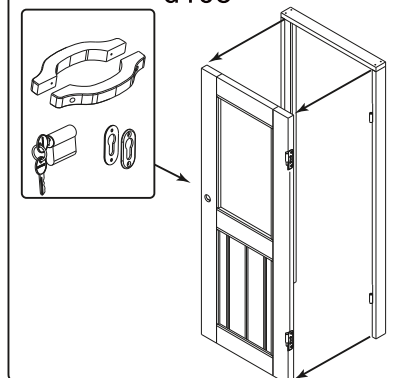

11x
4x35

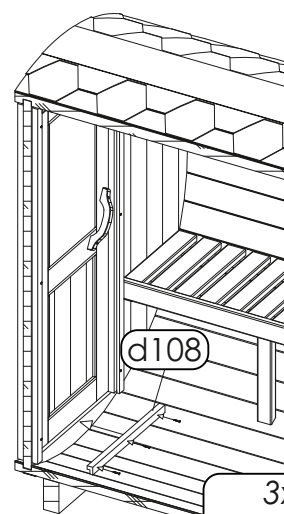

3x
4x35



Nr	Size	Qty	Preview	Nr	Size	Qty	Preview
p22	145x41x2990	23		si78	1975x488	2	
p23	145x41x2990	22		sv116	40x40x445	4	
p21	145x41x2990	1		si79	90x28x805	8	
p24	100x41x2990	1		d105	1710x707	1	
p24-1	45x41x2990	1		d104	1710x707	1	
s63	1823x644	1		ks87	70x40x100	4	
s61	1823x644	1		k109	1000x320	76(86*)	
s62	1944x675	1		ka108	L2990(3390*)	1	
s56	1810x618	2		v112	Set	3	
s55	1810x618	2		u113	50x50x35	8	
s57	708x112x39	4		67	Set, L6280	3	
s66	75x22x400	6			4x70	68	
n01	1600x200x75	3			4x35	135	
ks88	40x40x420	4			5x90	12	
d106	37x28x1735	8			4x60	30	
d107	37x28x655	4			2x30	385(410*)	
d108	37x28x610	1			t15,t20,t25	1	
ns86	70x40x447	4		rb01	L2000	2	

*With canopy