


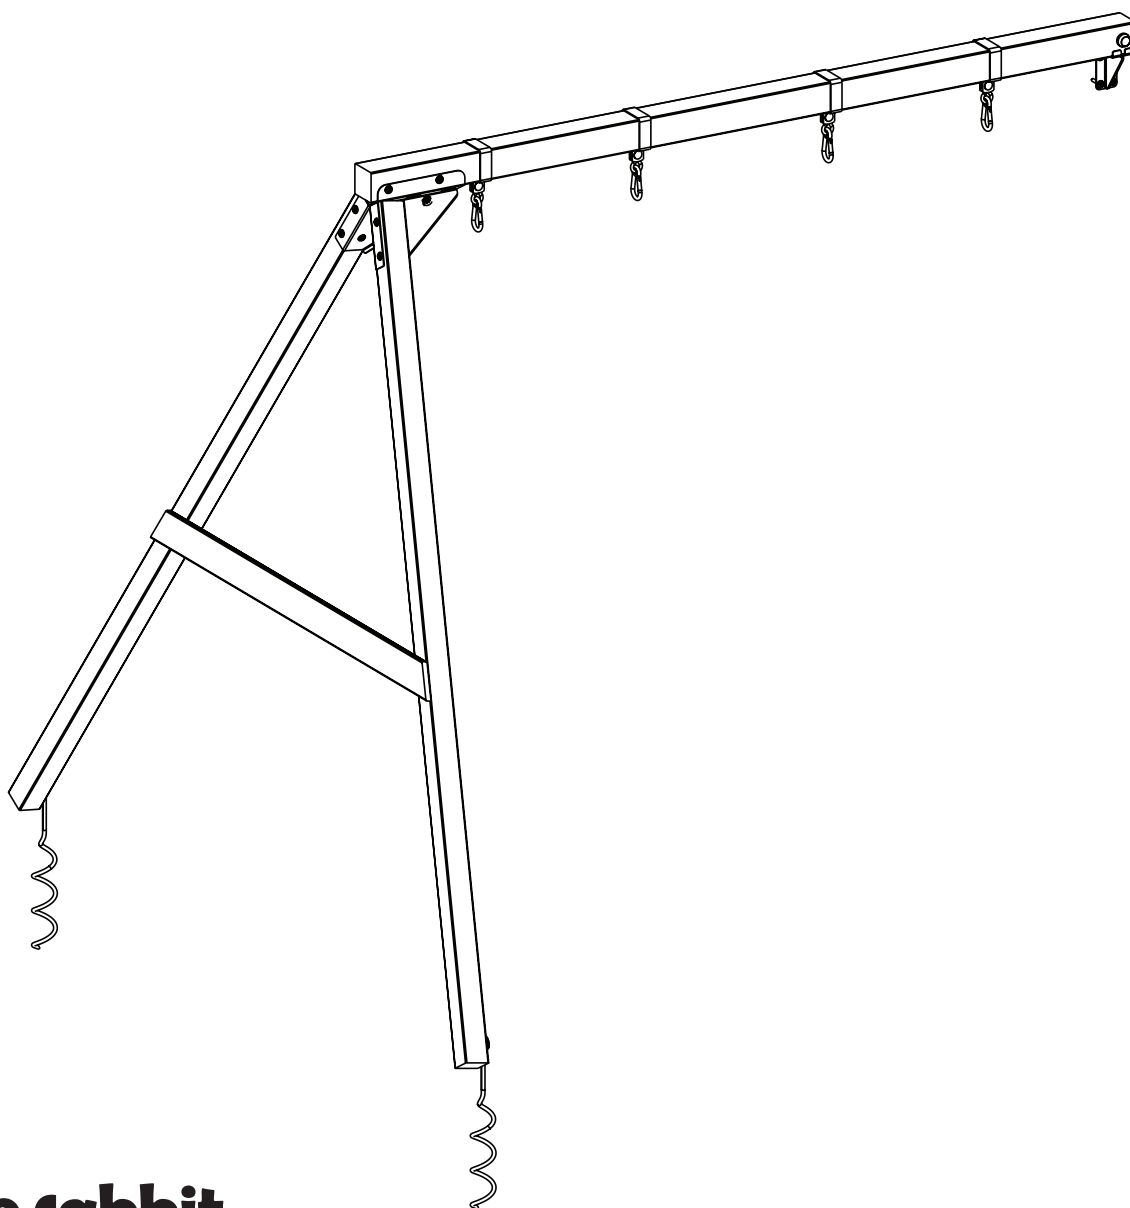

blue rabbit

@swing

EN	ASSEMBLY INSTRUCTIONS	PL	INSTRUKCJA MONTAŻU
DE	MONTAGEANLEITUNGEN	CZ	NÁVOD K MONTÁŽI
FR	INSTRUCTIONS DE MONTAGE	SK	MONTÁŽNY NÁVOD
ES	INSTRUCCIONES DE MONTAJE	SI	NAVODILA ZA MONTAŽO
IT	ISTRUZIONI PER L'ASSEMBLAGGIO	HR	UPUTE ZA MONTAŽU
NL	MONTAGE INSTRUCTIES	HU	ÖSSZESZERELÉSI ÚTMUTATÓ
PT	INSTRUÇÕES DE MONTAGEM	RO	INSTRUCȚIUNI DE ASAMBLARE
EL	ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ	BG	ИНСТРУКЦИЯ ЗА МОНТАЖ
DA	SAMLEANVISNING	LT	MONTAVIMO INSTRUKCIJA
SV	MONTERINGSINSTRUKTIONER	LV	MONTĀŽAS NORĀDĪJUMI
NO	MONTERINGSVEILEDNING	EE	KOKKUPANEMISJUHEND
FI	KOKOAMISOHJEET	RU	ИНСТРУКЦИЯ ПО СБОРКЕ



blue rabbit 2.0

IM008.003.005-v01 (2014-11)



© 2014










Blue Rabbit 2.0 - Hemelrijken 8 - B-2890 St-Amands - Belgium.
Copyrighted material - Do not reproduce under penalty of law.









EN 71-1, 2, 3 & 8

- 1x** **A** min 88 mm max 90 mm   
min 88 mm max 90 mm
- 2x** **B** min 68 mm max 90 mm   
min 68 mm max 90 mm
- 1x** **C** min 95 mm max 145 mm   
min 15 mm max 22 mm

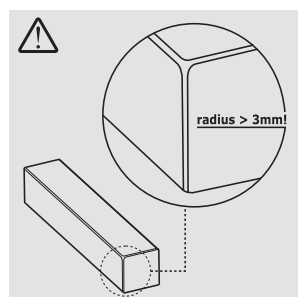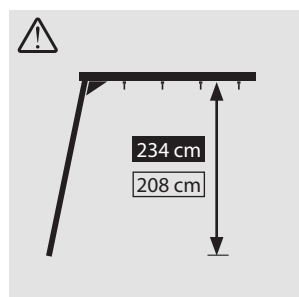

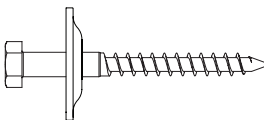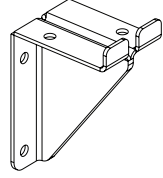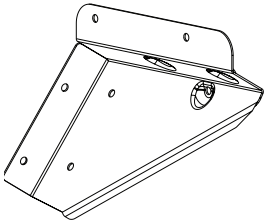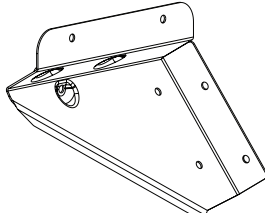
  80 mm	2x   70 mm
  50 mm	1x   16 mm
   80 - 140 mm	1x  
1x  	2x  
1x  	4x  

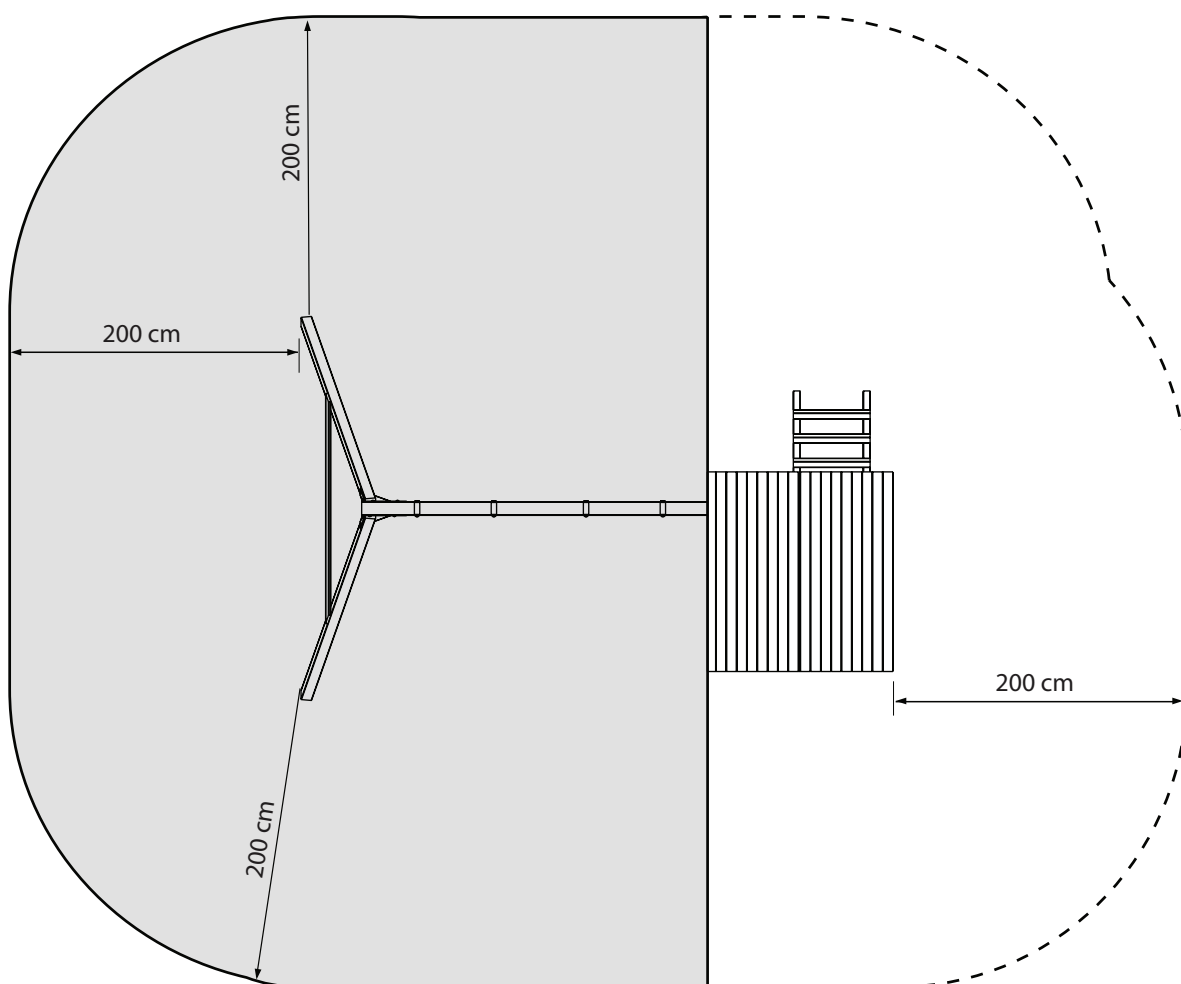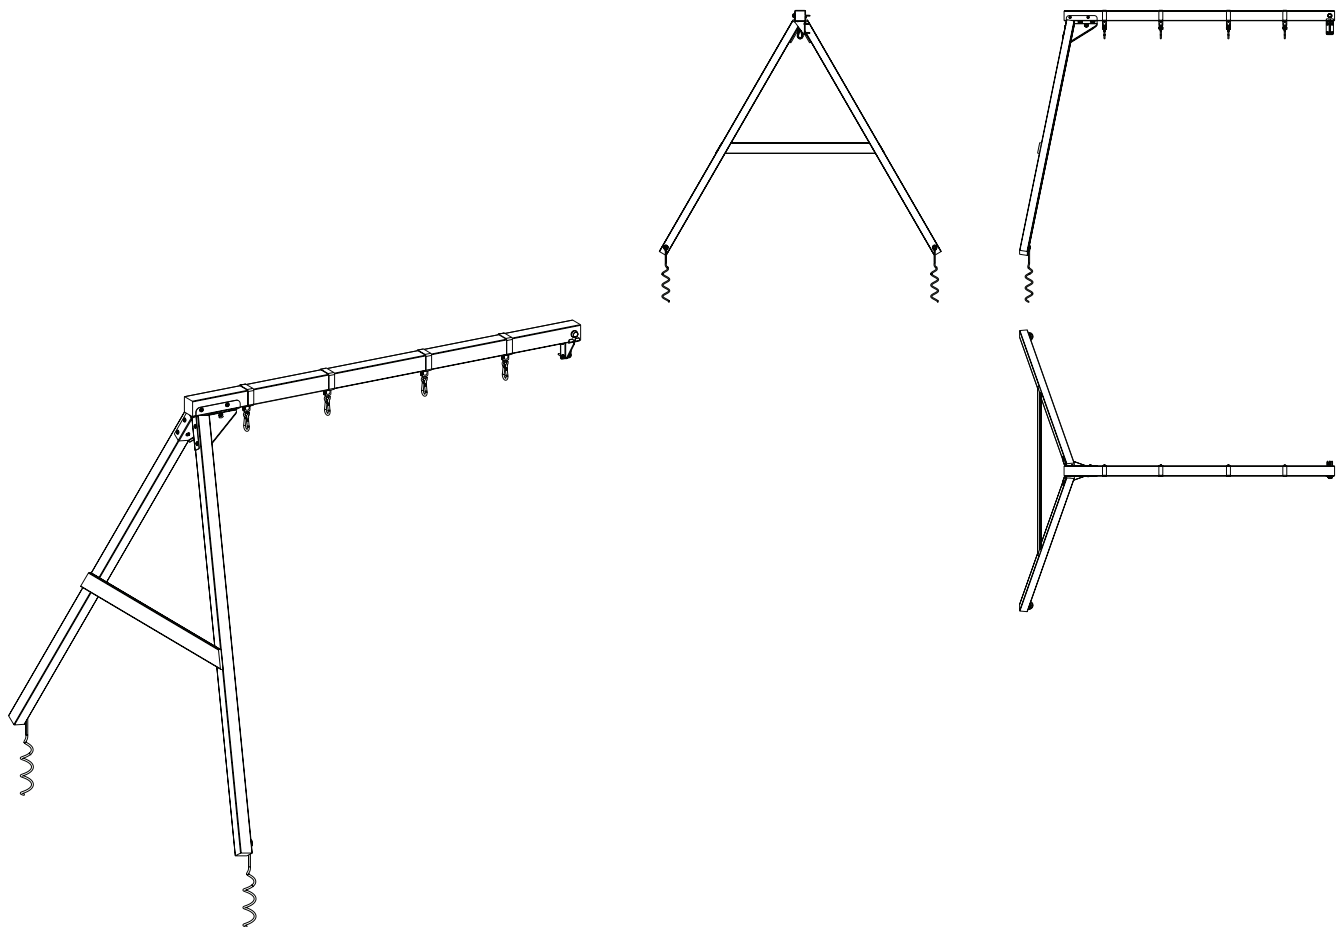

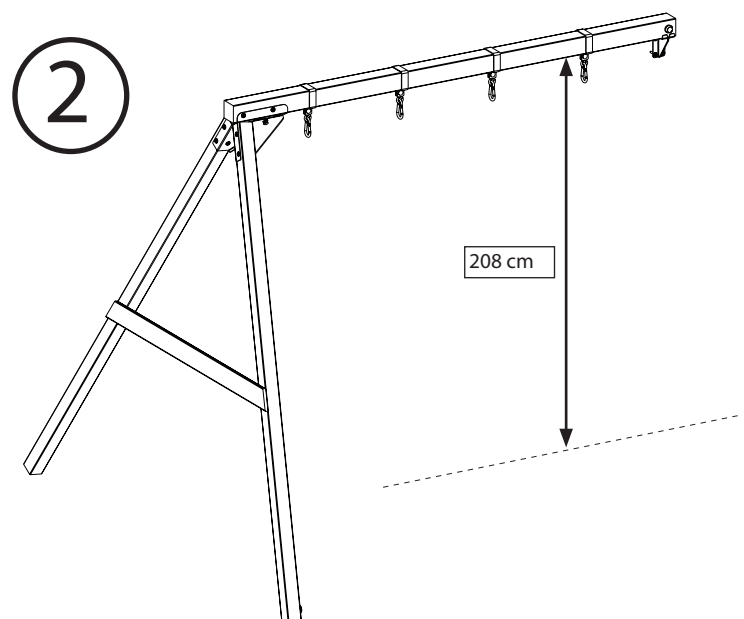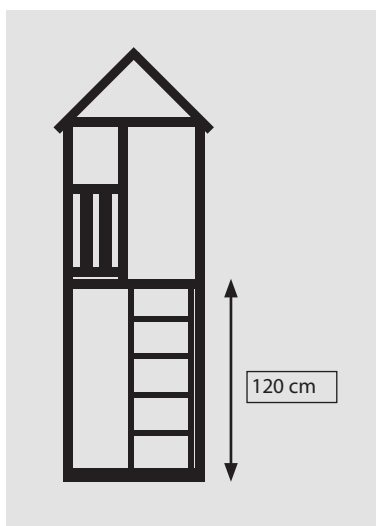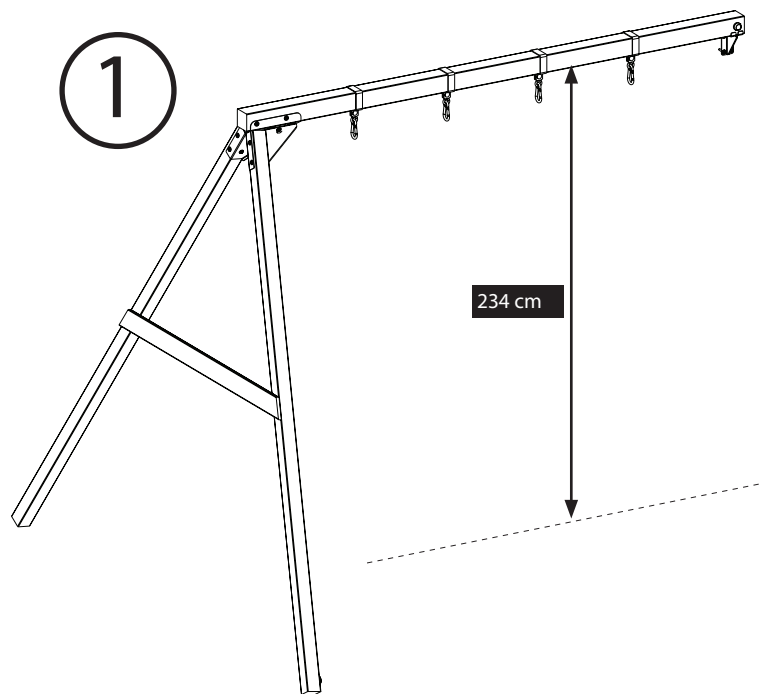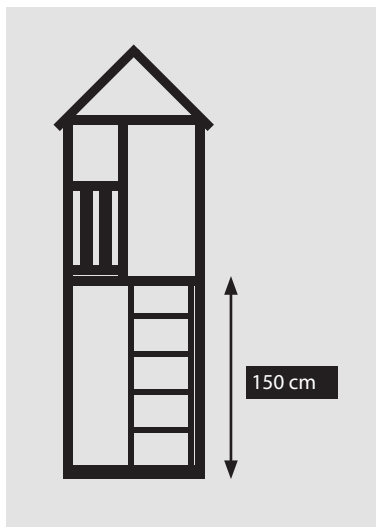

TOOLS REQUIRED

- (1) ratchet spanner with cap 13
- (2) tape measure
- (3) pencil
- (4) bit torx TX20
- (5) bit torx TX30
- (6) bit torx TX40
- (7) drill and/or screwdriver
- (8) square
- (9) wood bore bits Ø 3 and Ø 5 mm
- (10) speed bore bits Ø 10 and Ø 28 mm
- (11) wood saw
- (12) hammer
- (13) sandpaper

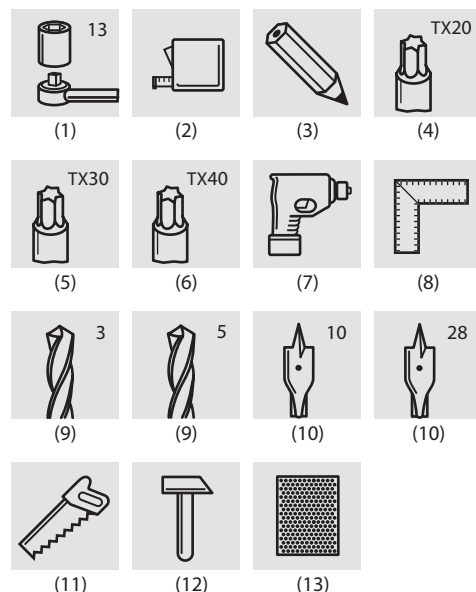


WOOD SCREWS

step 1/ To prevent the wood splitting we recommend pre-drilling all wood to be screwed. Always drill at least 15 mm less deep than the length of the screw. Pre-drill wood screws with a diameter of 4.5 mm with a 3 mm wood bore bit.

step 2/ First turn the screw one or two millimetres into the plank to be secured, then press this firmly against the other piece of wood.

step 3/ Tighten the screw with the torx TX20 bit supplied in the wood until the head of the screw is level with the surface of the wood.

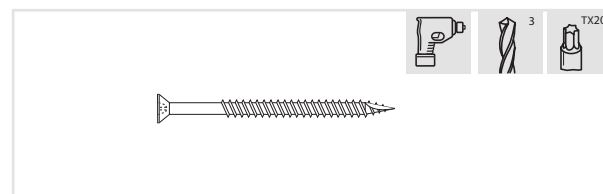

COACH SCREWS

step 1/ To prevent the wood splitting we recommend pre-drilling all wood to be screwed. Always drill at least 15 mm less deep than the length of the screw.


Pre-drill coach screws with a diameter of 8 mm with a 5 mm wood bore bit.

step 2/ Place the flat washer and the bottom of the protective cap over the shaft of the screw.

step 3/ First turn the screw one or two millimetres into the beam to be secured, then press this firmly against the other piece of wood.

step 4/ Tighten the screw with the torx bit TX40 supplied.

step 5/ Press the top of the protective cap into the opening provided.

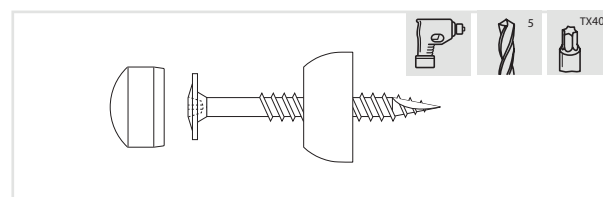

BOLTED CONNECTIONS

step 1/ Drill a hole with diameter 10 mm through both planks or beams that have already been screwed together (see 'wood screws')


step 2/ Hit the drive-in nut with a hammer along the designated side of the beam in the hole.



step 3/ Place the spring ring, the flat washer and then the bottom part of the protective cap over the shaft of the bolt.

step 4/ Push the bolt through the hole, and turn by hand several times until the bolt turns smoothly in the press-in nut.

step 5/ Tighten the bolt with torx bit TX40 supplied, until the spring ring is fully flattened between the head of the bolt and the flat washer.

step 6/ Press the top of the protective cap into the opening provided.

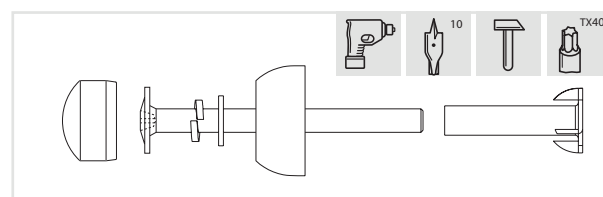

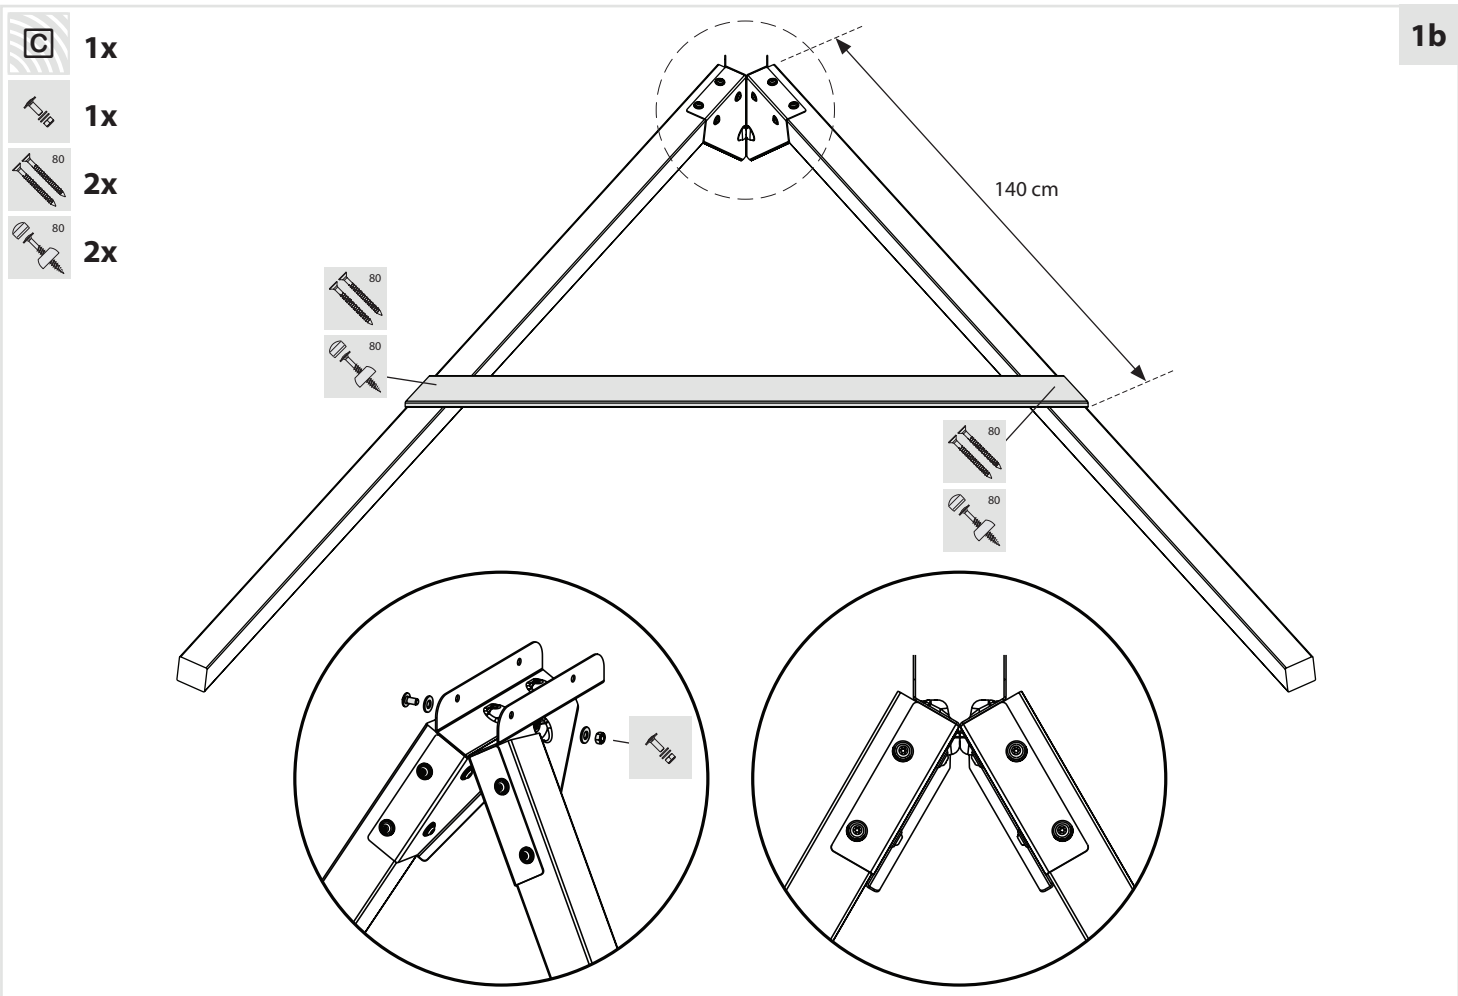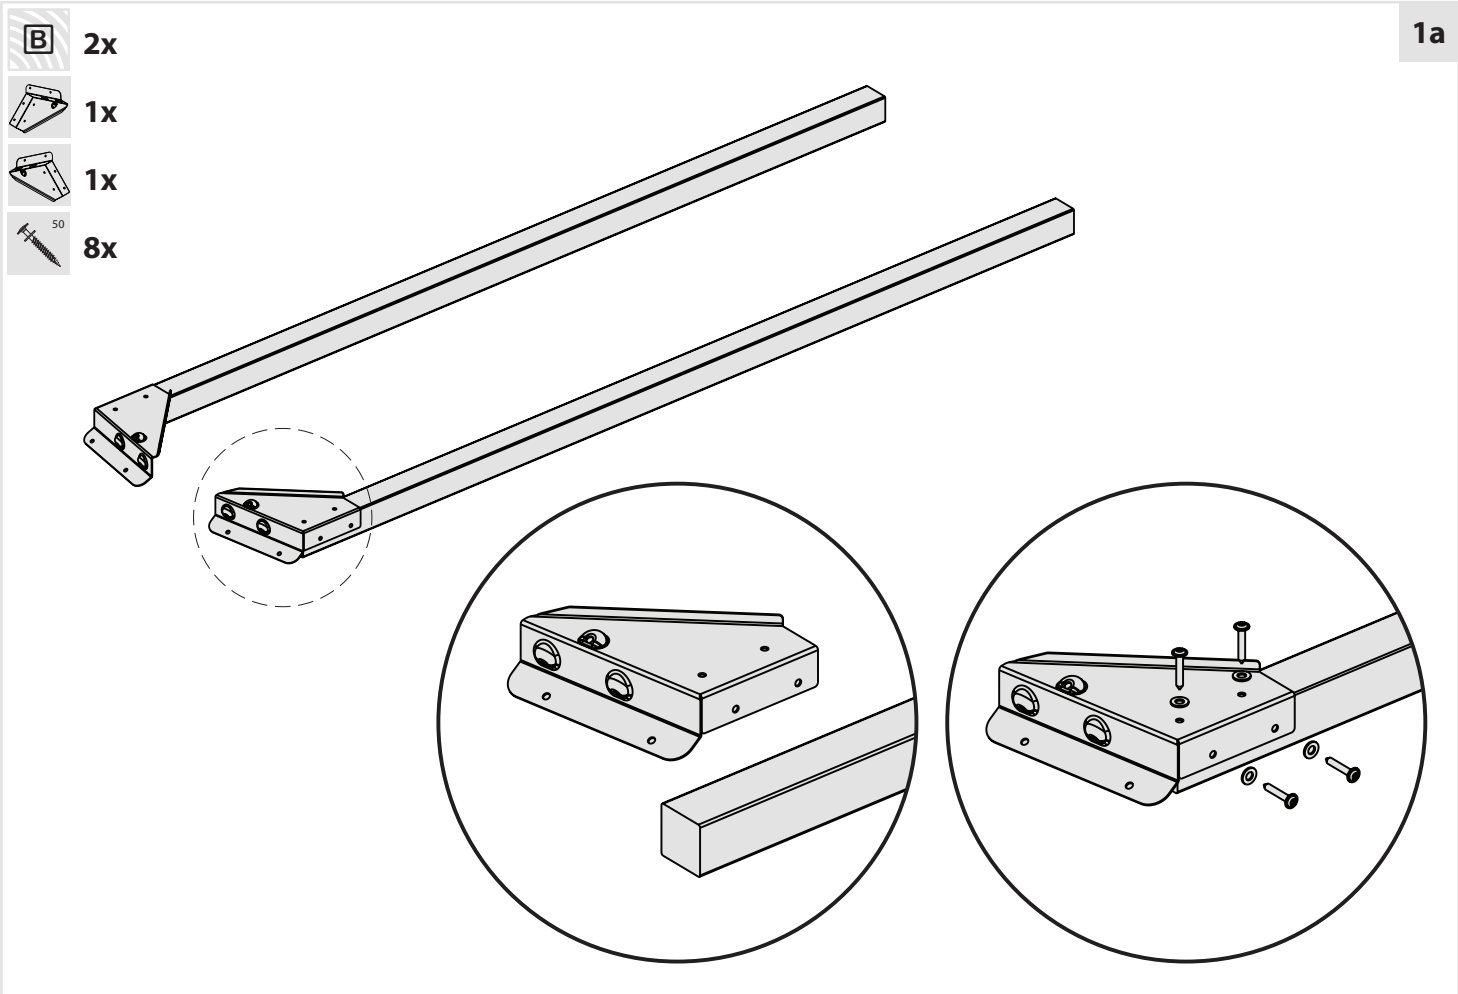



1x




1x




2x

2a

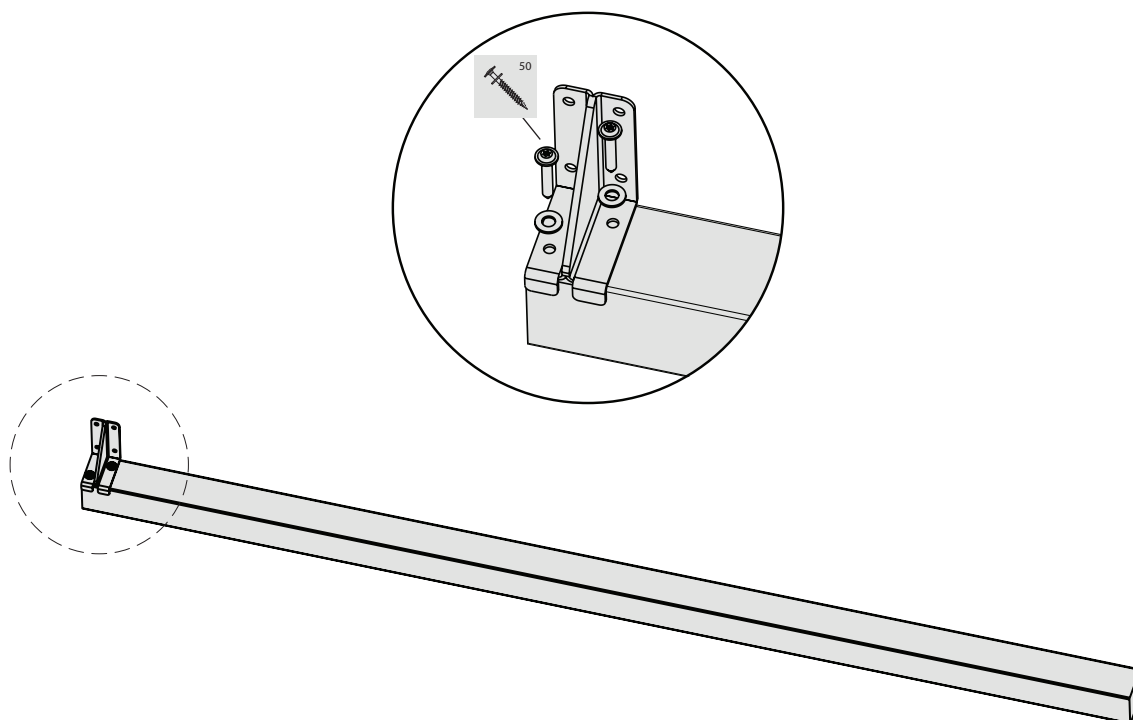

4x






2b

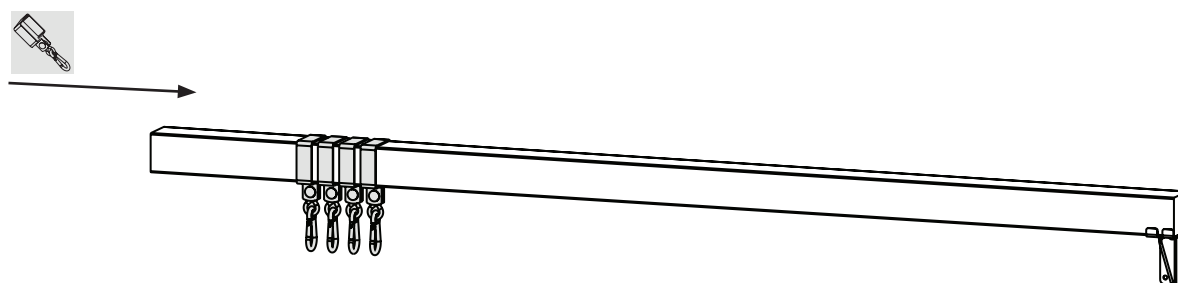



8x


2c

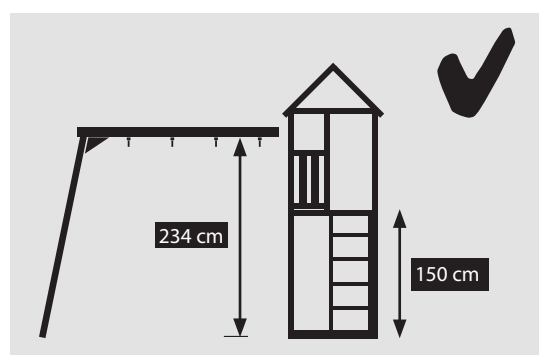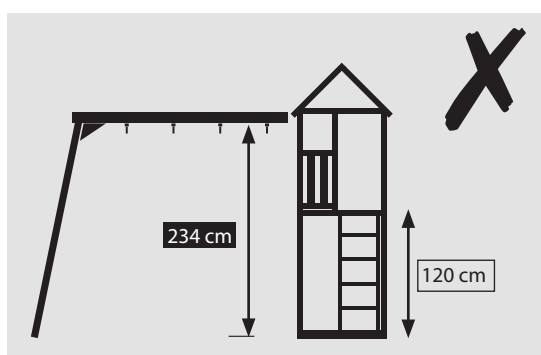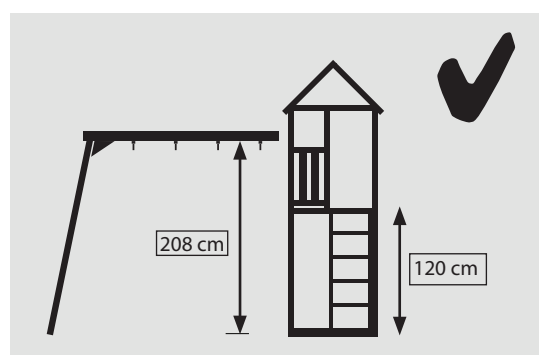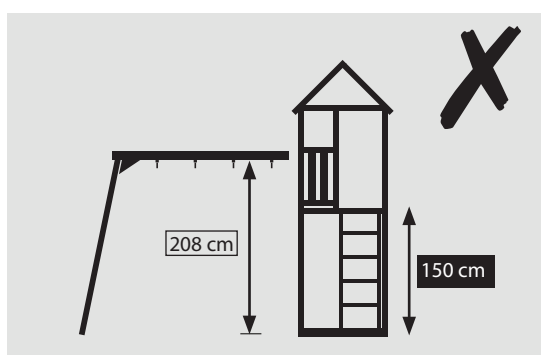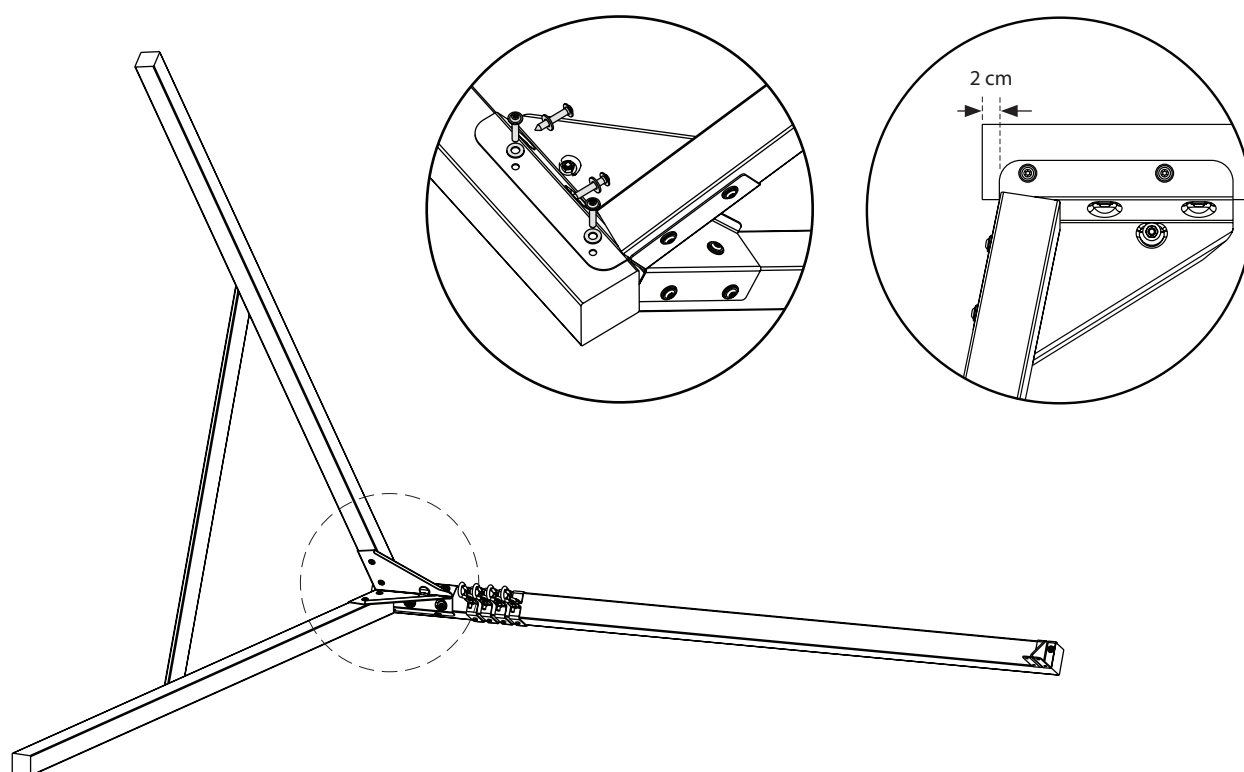




4x



3a

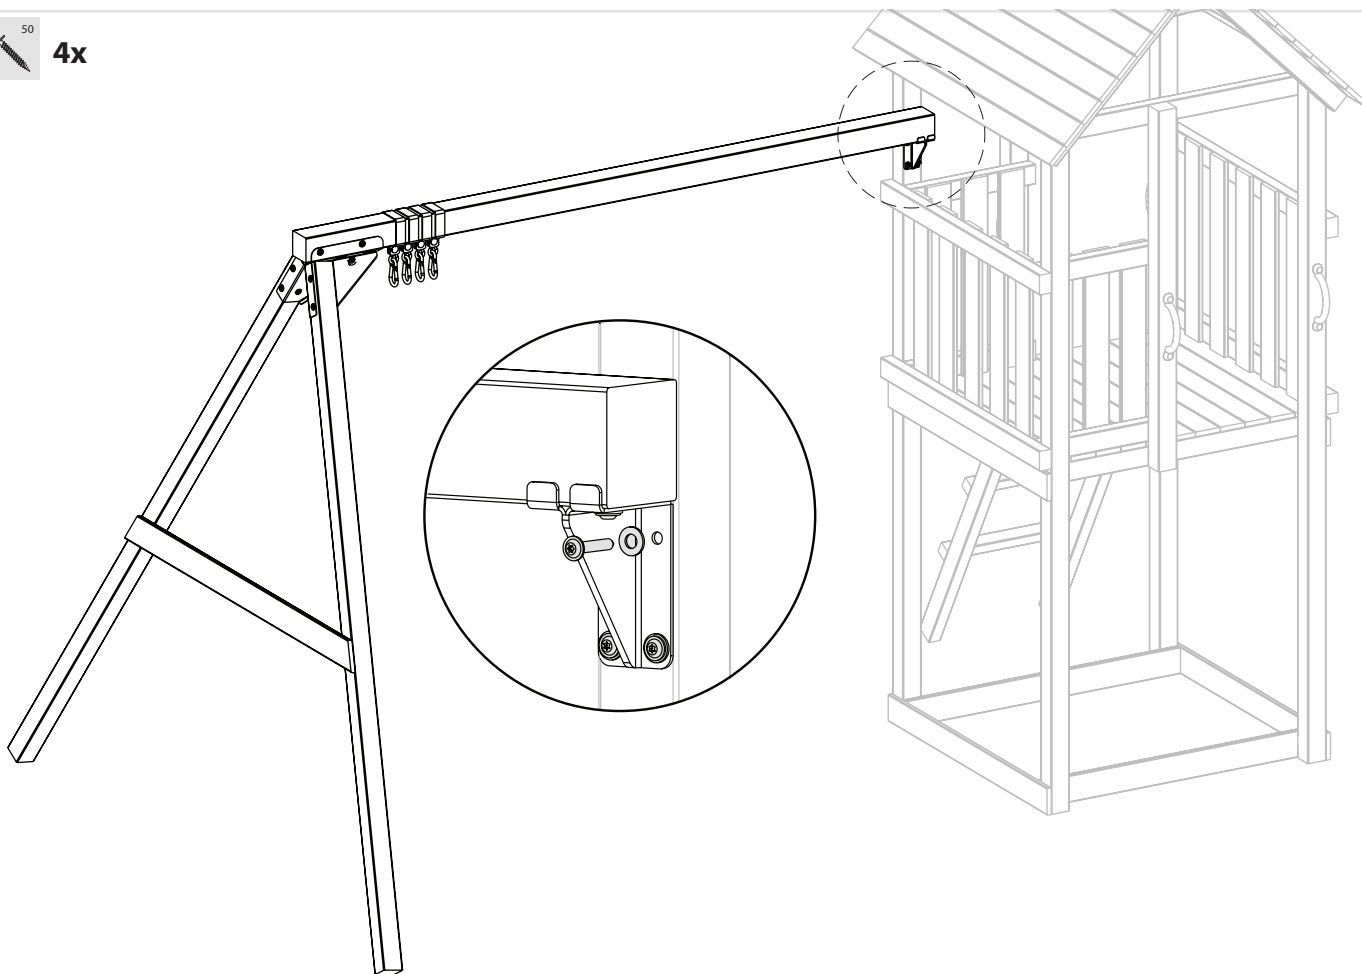

1x

3b

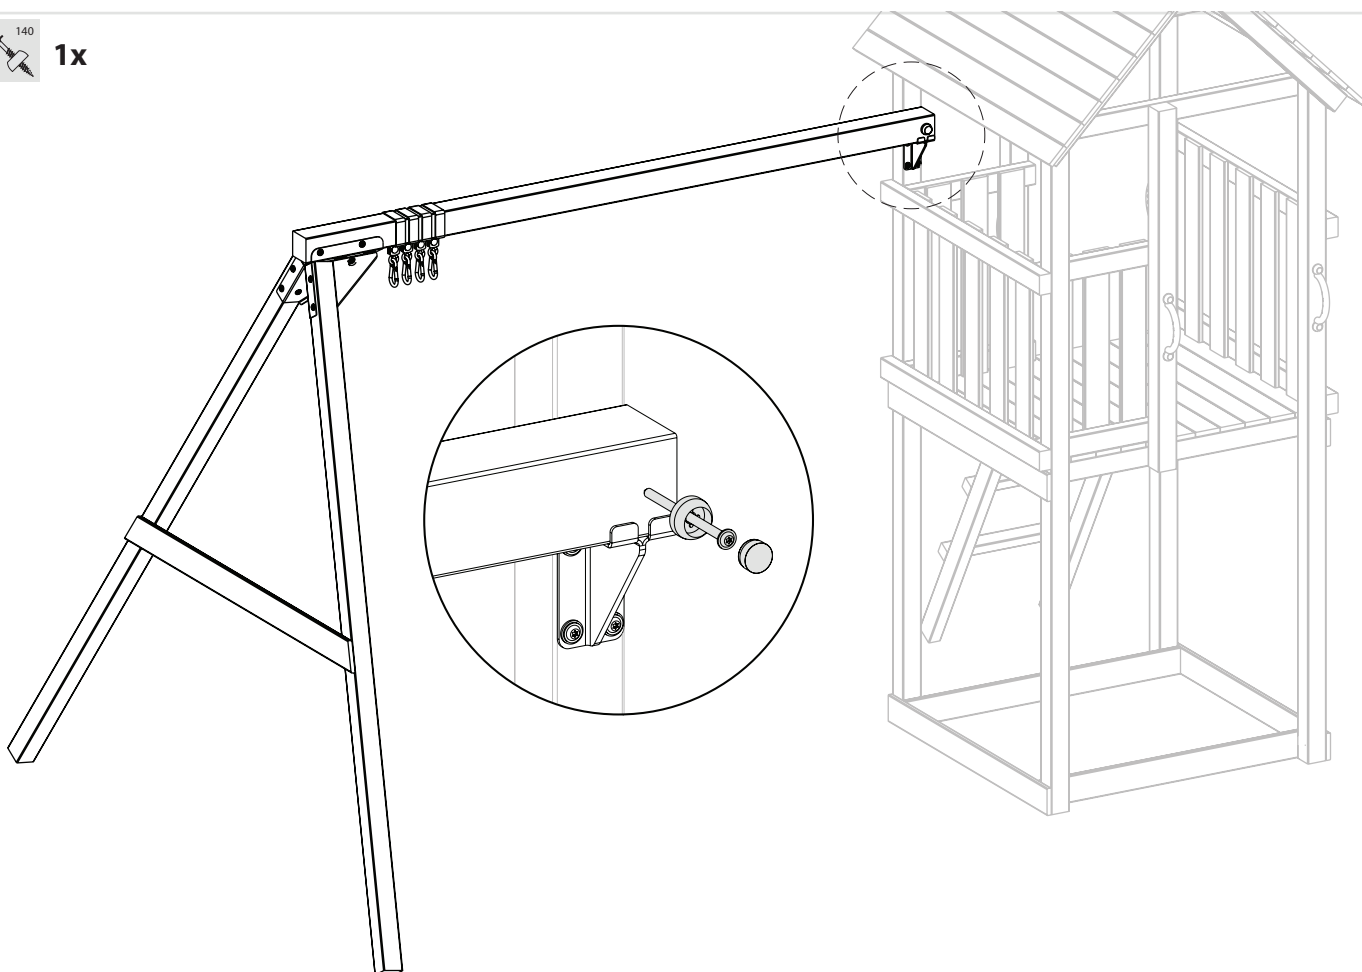

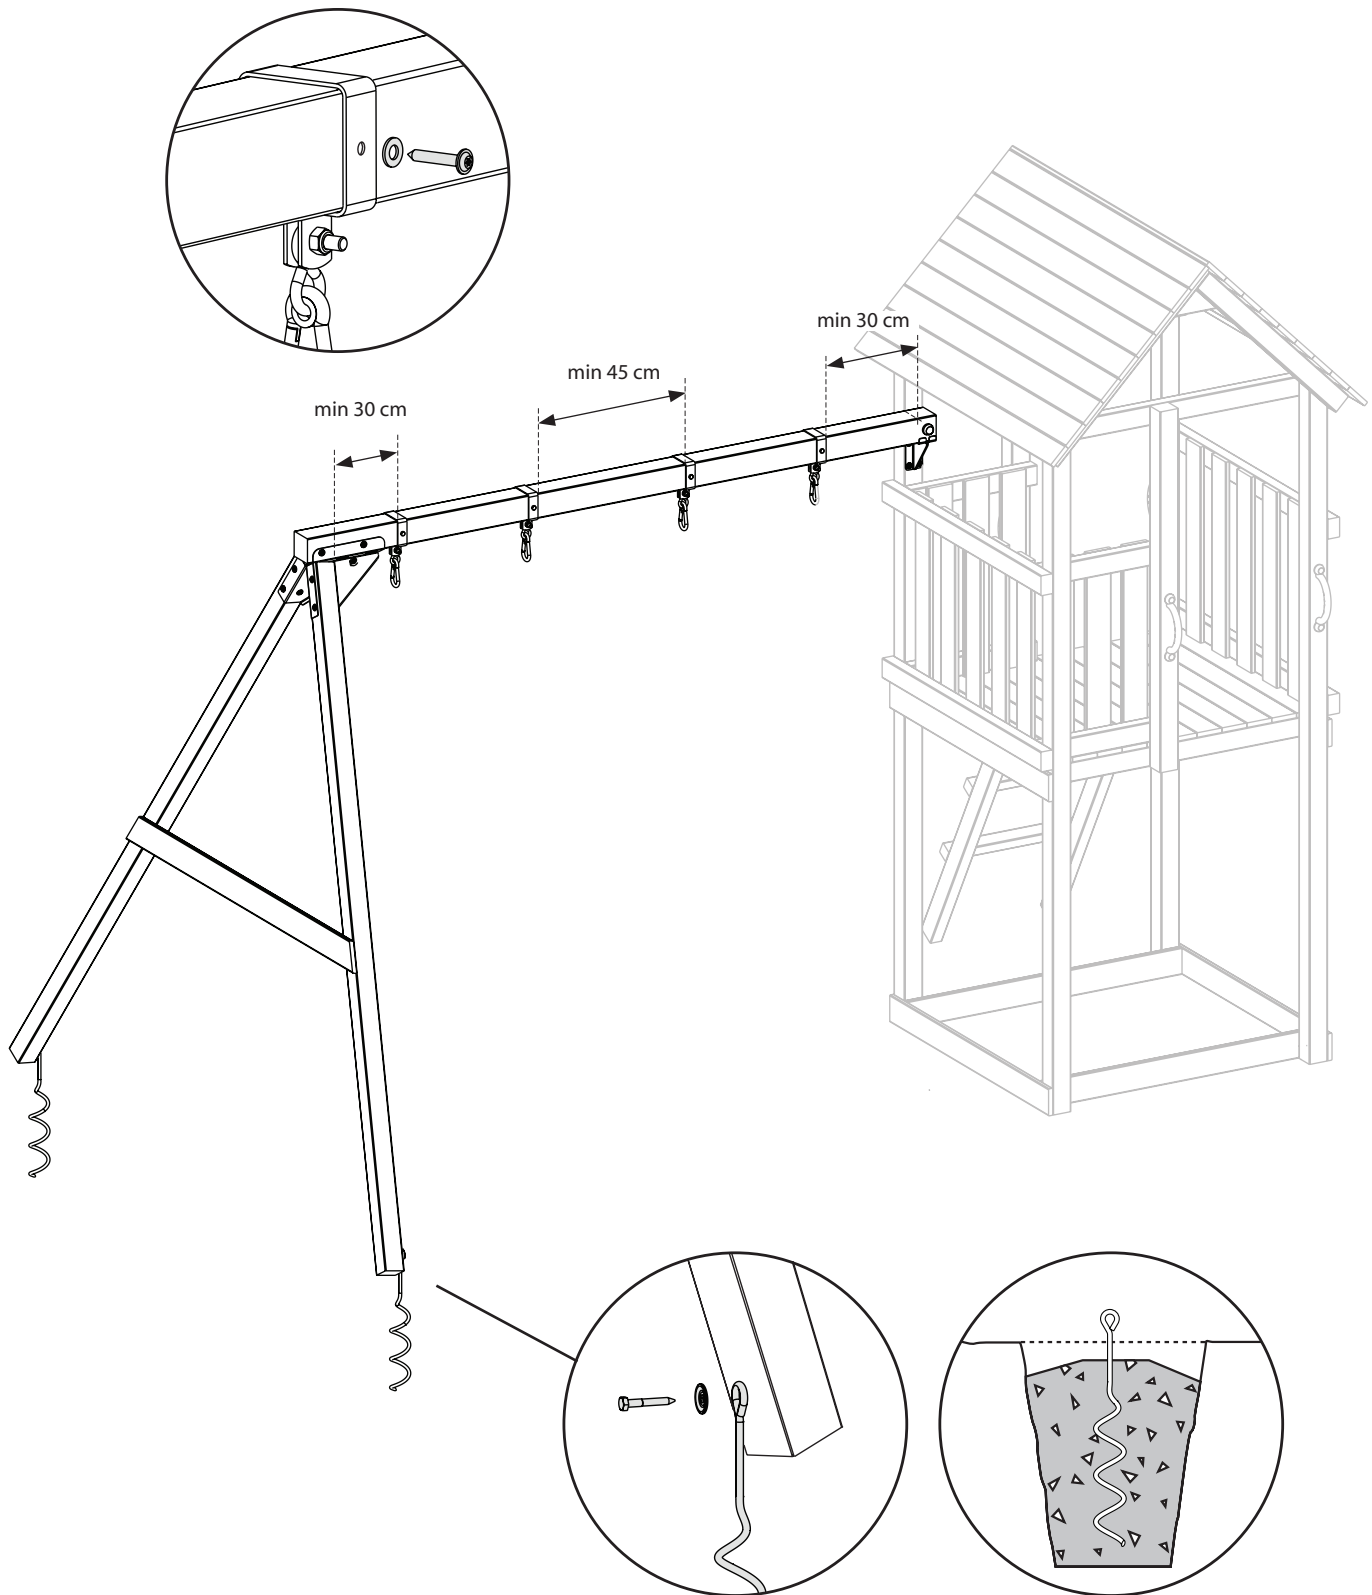



blue rabbit

Blue Rabbit 2.0®
Hemelrijken 8
B-2890 Sint-Amands
BELGIUM

www.bluerabbit.be