




Electrolux



electrolux.com/register

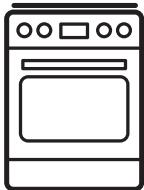

EN User Manual | **Cooker**

LKI74440SW

LKI74440SX



Welcome to Electrolux! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:
www.electrolux.com/support

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION.....	2
2. SAFETY INSTRUCTIONS.....	5
3. INSTALLATION.....	7
4. PRODUCT DESCRIPTION.....	9
5. BEFORE FIRST USE.....	9
6. HOB - DAILY USE.....	11
7. HOB - HINTS AND TIPS.....	15
8. HOB - CARE AND CLEANING.....	17
9. OVEN - DAILY USE	17
10. OVEN - CLOCK FUNCTIONS.....	20
11. OVEN - HINTS AND TIPS.....	21
12. OVEN - CARE AND CLEANING.....	33
13. TROUBLESHOOTING.....	36
14. ENERGY EFFICIENCY.....	38
15. ENVIRONMENTAL CONCERNs.....	40

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall

be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- WARNING: The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Only a qualified person must install this appliance and replace the cable.
- This appliance is intended for use up to an altitude of 2000 m above sea level.
- This appliance is not intended to be used on ships, boats or vessels.
- Do not install the appliance behind a decorative door in order to avoid overheating.
- Do not install the appliance on a platform.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.

- Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or lid.
- CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- WARNING: Danger of fire: Do not store items on the cooking surfaces.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door or the glass of hinged lids of the hob since they can scratch the surface, which may result in shattering of the glass.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. In case the appliance is connected to the mains directly using junction box, remove the fuse to disconnect the appliance from power supply. In either case contact the Authorised Service Centre.
- After use, switch off the hob element by its control and do not rely on the pan detector.
- WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Always use oven gloves to remove or insert accessories or ovenware.
- Before maintenance, cut the power supply.
- WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Use only the food sensor (core temperature sensor) recommended for this appliance.

- Be careful when you touch the storage drawer. It can get hot.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- The kitchen cabinet and the recess must have suitable dimensions.
- Keep the minimum distance from other appliances and units.
- Install the appliance in a safe and suitable place that meets installation requirements.
- Parts of the appliance carry current. Close the appliance with furniture to prevent touching the dangerous parts.
- The sides of the appliance must stay next to appliances or units with the same height.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware to fall from the appliance when the door or the window is opened.
- Make sure to install a stabilizing means in order to prevent tipping of the appliance. Refer to Installation chapter.

2.2 Electrical Connection



WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not let mains cables touch or come near the appliance door or the niche below the appliance, especially when it operates or the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.

- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- Fully close the appliance door before you connect the mains plug to the mains socket.

2.3 Use

WARNING!

Risk of injury and burns.
Risk of electrical shock.

- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.
- Do not use aluminum foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only accessories recommended for this appliance by the manufacturer.
- Always use glass and jars approved for preserving purposes.

WARNING!

Risk of fire and explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.

- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.

WARNING!

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
 - do not put ovenware or other objects in the appliance directly on the bottom.
 - do not put aluminium foil directly on the bottom of cavity.
 - do not put water directly into the hot appliance.
 - do not keep moist dishes and food in the appliance after you finish the cooking.
 - be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- Do not keep hot cookware on the control panel.
- Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Cookware made of cast iron, aluminium or with a damaged bottom can cause scratches. Always lift these objects up when you have to move them on the cooking surface.

2.4 Care and Cleaning

WARNING!

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance. Disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Authorised Service Centre.
- Be careful when you remove the door from the appliance. The door is heavy!
- Fat and food remaining in the appliance can cause fire.
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Make sure the cavity and the door are wiped dry after each use. Steam produced during the operation of the appliance condensates on cavity walls and can cause corrosion. To decrease the condensation operate the appliance for 10 minutes before cooking.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, follow the safety instructions on the packaging.
- Do not clean the catalytic enamel (if applicable) with any kind of detergent.

2.5 Internal lighting

WARNING!

Risk of electric shock.

3. INSTALLATION

WARNING!

Refer to Safety chapters.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.
- This product contains a light source of energy efficiency class G.
- Use only lamps with the same specifications.

2.6 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

2.7 Disposal

WARNING!

Risk of injury or suffocation.

- Contact your municipal authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

3.1 Technical data

Dimensions

Height 850 - 936 mm

Width 696 mm

Dimensions

Depth 600 mm

3.2 Electrical installation

⚠️ WARNING!

The manufacturer is not responsible if you do not follow the safety precautions from Safety chapters.


This appliance is supplied with a main plug and a main cable. The connection terminal is located behind the back panel.

⚠️ CAUTION!

If you connect the plug from the appliance to a 3 phase contact, it must have neutral phase. If not, the appliance does not work.

⚠️ WARNING!

The power cable must not touch the part of the appliance shaded in the illustration.

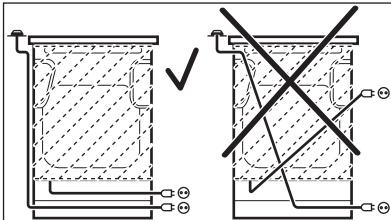

3.3 Anti-tilt protection

⚠️ CAUTION!

Install the anti-tilt protection to prevent the appliance from falling under incorrect loads. The anti-tilt protection only works when the appliance is put in a correct area.

Your appliance has the symbols shown on the pictures (if applicable) to remind you about the installation of the anti-tilt protection.




Make sure you install the anti-tilt protection at the correct height.

For more information about the installation of the appliance refer to a separate installation booklet


4. PRODUCT DESCRIPTION

4.1 General overview

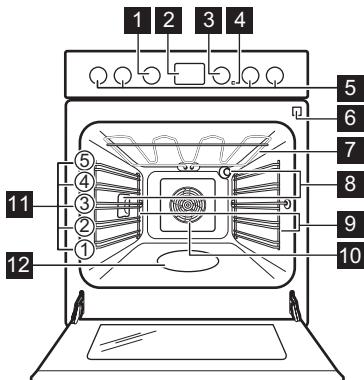

1 Knob for the oven functions

4.2 Hob overview

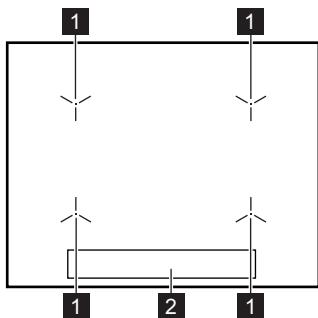

1 Induction cooking zone

- 2 Display
- 3 Knob for the temperature
- 4 Temperature indicator / symbol
- 5 Knobs for the hob
- 6 Socket for the core temperature sensor
- 7 Heating element
- 8 Lamp
- 9 Shelf support, removable
- 10 Fan
- 11 Shelf positions
- 12 Cavity embossment

4.3 Accessories

- **Wire shelf**
For cookware, cake tins, roasts.
- **Baking tray**
For cakes and biscuits.
- **Grill- / Roasting pan**
To bake and roast or as pan to collect fat.
- **Core temperature sensor**
To measure how far the food is cooked.
- **Storage drawer**
The storage drawer is below the oven cavity.

5. BEFORE FIRST USE

WARNING!

Refer to Safety chapters.

5.1 Initial preheating and cleaning

Preheat the empty appliance before the first use and contact with food. The appliance can

emit unpleasant smell and smoke. Ventilate the room during preheating.

1. Remove all accessories and removable shelf supports from the appliance.
2. Set the function . Set the maximum temperature. Let the appliance operate for 1 h.

3. Set the function . Set the maximum temperature. Let the appliance operate for 15 min.
4. Set the function . Set the maximum temperature. Let the appliance operate for 15 min.
5. Turn off the appliance and wait until it is cold.
6. Clean the appliance and the accessories only with a microfibre cloth, warm water and a mild detergent.
7. Put the accessories and removable shelf supports back to their initial position.

5.2 Using the sensor fields

To activate the function press and hold the selected symbol on the display for at least 1 second.

5.3 Setting the time

You must set the time before you operate the oven.

The flashes when you connect the appliance to the electrical supply, when there was a power cut or when the timer is not set.

Press the or to set the correct time. After approximately five seconds, the flashing stops and the display shows the time of day you set.

5.4 Changing the time




You cannot change the time of day if any of the functions operates.

Press again and again until the indicator for the Time of Day function flashes. To set a new time, refer to "Setting the time".

5.5 Opening and closing the door with the mechanical door lock

The mechanical door lock is activated by default.


To open the door move the lock to the right.

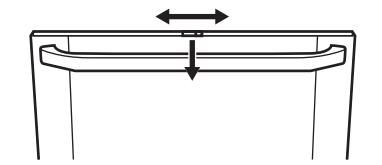


Close the door without pressing the lever.

5.6 Deactivating the mechanical door lock - in the main oven


1. Press the door trim B at each side. The seal releases.

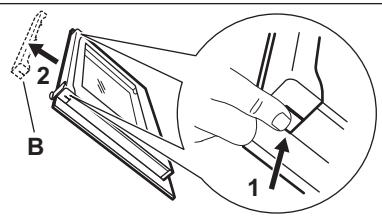

2. Pull the door trim up and remove it.
3. Remove the lever 1, move it to the right 2 and put it back in.

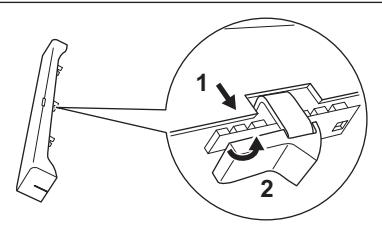

4. Hold the door trim B at each side and position it on the inner edge of the door. Put the door trim into the top edge of the door.

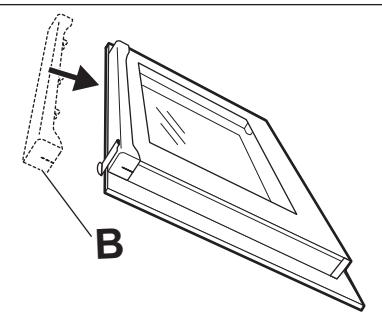

Activating the mechanical door lock

Do the above procedure again and move the lever back to the left.




Deactivating the appliance does not deactivate the mechanical door lock.

6. HOB - DAILY USE

⚠️ WARNING!

Refer to Safety chapters.

6.1 Hob control panel

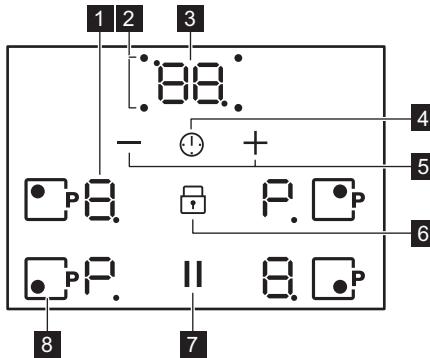

Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

Sensor field	Function	Comment
1	-	Heat setting display
2	-	Timer indicators of cooking zones
3	-	Timer display
4	⌚	-
5	+/ -	To increase or decrease the time.
6	🔒	Lock / Child safety device
7		Pause
8	☛	PowerBoost

6.2 Heat setting displays

Display	Description
	The cooking zone is deactivated.
	The cooking zone operates. The dot means a change by half of a heating level.
	Pause operates.
	Automatic heat up operates.
	PowerBoost operates.
	There is a malfunction.
	OptiHeat control (3 step Residual heat indicator): continue cooking / keep warm / residual heat.
	Lock / Child safety device operates.
	Incorrect or too small cookware or no cookware on the cooking zone.
	Automatic switch off operates.

6.3 OptiHeat control (3 step Residual heat indicator)

WARNING!

/ / As long as the indicator is visible, there is a risk of burns from residual heat.

The induction cooking zones produce the heat necessary for the cooking process directly in the bottom of the cookware. The glass ceramic is heated by the heat of the cookware.

The indicators appear when a cooking zone is hot. They show the level of the residual heat for the cooking zones you are currently using:

- continue cooking,
- keep warm,
- residual heat.

The indicator may also appear:

- for the neighbouring cooking zones even if you are not using them,

- when hot cookware is placed on cold cooking zone,
- when the hob is deactivated but the cooking zone is still hot.

The indicator disappears when the cooking zone has cooled down.

6.4 The heat setting

Turn the knob for the heating functions to select a heating function. To deactivate it turn the knob to the off position **0**.

6.5 Automatic switch off

The function deactivates the hob automatically if:

- all cooking zones are deactivated,
- you do not set the heat setting after you activate the hob,
- you spill something or put something on the control panel for more than 10 seconds (a pan, a cloth, etc.). An acoustic signal sounds and the hob deactivates. Remove the object or clean the control panel.

- the hob gets too hot (e.g. when a saucepan boils dry). Let the cooking zone cool down before you use the hob again.
- you use incorrect cookware. The symbol  comes on and the cooking zone deactivates automatically after 2 minutes.
- you do not deactivate a cooking zone or change the heat setting. After some time  comes on and the hob deactivates.

The relation between the heat setting and the time after which the hob deactivates:

Heat setting	The hob deactivates after
 1 - 2	6 hours
3 - 4	5 hours
5	4 hours
6 - 9	1.5 hour

6.6 Automatic heat up

If you activate this function you can get a necessary heat setting faster. The function sets the highest heat setting for some time and then decreases to the correct heat setting.



To activate the function a cooking zone must be cold.

To activate the function for a cooking zone: turn the knob for a cooking zone to the  position.  shows on the display.

Immediately set the correct heat setting.

To deactivate the function: turn the knob to the off position.

6.7 PowerBoost

This function makes more power available to the induction cooking zones. The function can be activated for the induction cooking zone only for a limited period of time. After this time the induction cooking zone automatically sets back to the highest heat setting.

To activate the function for a cooking zone: touch .  comes on.

To deactivate the function: change the heat setting.

6.8 Timer

Count down timer

You can use this function to set how long the cooking zone should operate for a single cooking session.

First set the heat setting for the cooking zone then set the function.

To set the cooking zone: touch  again and again until the indicator of a necessary cooking zone comes on.

To activate the function: touch  of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone starts to flash slowly the time counts down.

To see the remaining time: set the cooking zone with . The indicator of the cooking zone starts to flash quickly. The display shows the remaining time.

To change the time: set the cooking zone with . Touch  or .

To deactivate the function: set the cooking zone with  and touch . The remaining time counts back to 00. The indicator of the cooking zone goes out.



When the time comes to an end, the sound operates and 00 flashes. The cooking zone deactivates.

To stop the sound: touch .

Count up timer

You can use this function to monitor how long the cooking zone operates.

To set the cooking zone: touch  again and again until the indicator of a necessary cooking zone comes on.

To activate the function: touch  of the timer.  comes on. When the indicator of the cooking zone starts to flash slowly the time counts up. The display switches between  and counted time (minutes).

To see how long the cooking zone

operates: set the cooking zone with . The indicator of the cooking zone starts to flash quickly. The display shows how long the zone operates.

To deactivate the function: set the cooking zone with and touch or . The indicator of the cooking zone goes out.

Minute minder

You can use this function as a **Minute minder** when the hob is activated and the cooking zones do not operate. The heat setting display shows .

To activate the function: touch . Touch or of the timer to set the time. Cooking zones display deactivates automatically after 10 seconds. When the time comes to an end, the sound operates and **00** flashes.

To stop the sound: touch .

To deactivate the function: activate for a short time and deactivate left front cooking zone.



The function has no effect on the operation of the cooking zones.

6.9 Pause

This function sets all operating cooking zones to the lowest heat setting.

The function does not stop the timer functions.

1. To activate the function: press .

comes on. The heat setting is lowered to 1.

2. To deactivate the function: press .

The previous heat setting appears.



If you change the heat setting, the function stops and the display shows the new heat setting.

6.10 Lock

You can lock the sensors on the hob while cooking zones operate.

Set the heat setting first.

To activate the function: touch . comes on for 4 seconds. The Timer stays on.

To deactivate the function: touch . The previous heat setting comes on.



When you deactivate the hob, you also deactivate this function.

6.11 Child safety device

This function prevents an accidental operation of the hob.

To activate the function: the hob must be deactivated. Touch for 4 seconds until flashes. Touch . comes on for 4 seconds.

To deactivate the function: the hob must be deactivated. Touch for 4 seconds until flashes. Touch . comes on for 4 seconds.

To override the function for only one

cooking time: activate a cooking zone. comes on. Touch for 4 seconds until comes on for all zones. **Set the heat setting in 4 seconds.** You can operate the hob. When you deactivate the appliance the function operates again.

6.12 OffSound control (Deactivation and activation of the sounds)

Deactivate the hob. Touch for 3 seconds. Touch for 3 seconds. or comes on.

Touch of the timer to choose one of the following:

- - the sounds are off
- - the sounds are on.


To confirm your selection wait until the hob deactivates automatically.

When the function is set to  you can hear the sounds only when:

- Minute minder comes down
- Count down timer comes down
- you put something on the control panel.

6.13 Power management function

- Cooking zones are grouped according to the location and number of phases in the hob. See the illustration.
- Each phase has a maximum electricity load.
- The function divides the power between cooking zones connected to the same phase.
- The function activates when the total electricity load of the cooking zones connected to a single phase is exceeded.

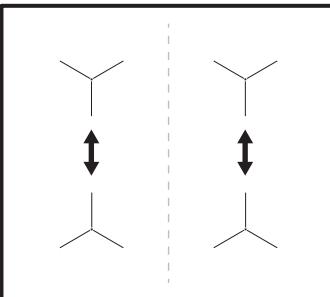

7. HOB - HINTS AND TIPS

WARNING!

Refer to Safety chapters.

7.1 Cookware

For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

Use the induction cooking zones with suitable cookware.

Cookware material

- **correct:** cast iron, steel, enamelled steel, stainless steel, multi-layer bottom (with a correct marking from a manufacturer).
- **not correct:** aluminium, copper, brass, glass, ceramic, porcelain.

Cookware is suitable for an induction hob if:

- water boils very quickly on a zone set to the highest heat setting.
- a magnet pulls on to the bottom of the cookware.

The bottom of the cookware must be as thick and flat as possible. Ensure pan bases are clean and dry before placing on the hob surface.

Cookware dimensions

Induction cooking zones adapt automatically to the dimension of the bottom of the cookware. For correct cookware dimensions refer to "Cooking zones specification" table.

Place the cookware in the center of the selected cooking zone.

For optimal heat transfer use cookware with bottom diameter similar to the maximum size of the cooking zone specified in Cookware diameter.

7.2 Cooking zones specification

Cooking zone	Cookware diameter (mm)	Power (W)
Left rear	125 - 140	1400/2500
Right rear	145 - 180	1800/2800
Right front	145 - 180	1800/2800

Cooking zone	Cookware diameter (mm)	Power (W)
Left front	180 - 210	2300/3600

7.3 Noises during operation



The noises are normal and do not indicate any malfunction. Cookware noises may vary depending on the cookware material and the power level.

Cookware-related noises:

- cracking noise: cookware is made of different materials (a sandwich construction).
- whistling sound: you use a cooking zone with a high power level and the cookware is made of different materials (a sandwich construction).
- humming: you use a high power level.

Hob-related noises:

- clicking: electric switching occurs.
- hissing, buzzing: the fan operates.
- rhythmic sound: cookware is detected.

7.4 Öko Timer Eco timer

To save energy, the heater of the cooking zone deactivates before the count down timer sounds. The difference in the operation time depends on the heat setting level and the length of the cooking operation.

7.5 Simplified cooking guide

The correlation between the heat setting of a zone and its consumption of power is not linear. When you increase the heat setting, it is not proportional to the increase of the consumption of power. It means that a cooking zone with the medium heat setting uses less than a half of its power.



The data in the table is for guidance only.

Heat setting	Use to:	Time (min)	Hints
<input type="checkbox"/> - 1	Keep cooked food warm.	as necessary	Put a lid on the cookware.
1 - 2.	Hollandaise sauce; melt: butter, chocolate, gelatine.	5 - 25	Mix from time to time.
2.	Solidify: fluffy omelettes, baked eggs.	10 - 40	Cook with a lid on.
2. - 3.	Simmer rice and milk-based dishes, heat up ready-cooked meals.	25 - 50	Add at least twice as much liquid as rice, mix milk dishes halfway through the procedure.
3. - 4.	Stew vegetables, fish, meat.	20 - 45	Add a few tablespoons of water. Check the water amount during the process.
4. - 5.	Steam potatoes and other vegetables.	20 - 60	Cover the bottom of the pot with 1-2 cm of water. Check the water level during the process. Keep the lid on the pot.
4. - 5.	Cook larger quantities of food, stews and soups.	60 - 150	Up to 3 l of liquid plus ingredients.
5. - 7	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts.	as necessary	Turn over when needed.

Heat setting	Use to:	Time (min)	Hints
7 - 8	Heavy fry, hash browns, loin steaks, steaks.	5 - 15	Turn over when needed.
9	Boil water, cook pasta, sear meat (goulash, pot roast), deep-fry chips.		
	Boil large quantities of water. PowerBoost is activated.		

8. HOB - CARE AND CLEANING

WARNING!

Refer to Safety chapters.

8.1 General information

- Clean the hob after each use.
- Always use cookware with a clean base.
- Scratches or dark stains on the surface have no effect on how the hob operates.
- Use a special cleaning agent suitable for the surface of the hob.
- Always use a scraper recommended for hobs with a glass surface. Use the scraper only as an additional tool for cleaning the glass after the standard cleaning procedure.

WARNING!

Do not use knives or any other sharp, metal tools to clean the glass surface.

8.2 Cleaning the hob

- **Remove immediately:** melted plastic, plastic foil, salt, sugar and food with sugar, otherwise, the dirt can cause damage to the hob. Take care to avoid burns. Use a special hob scraper on the glass surface at an acute angle and move the blade on the surface.
- **Remove when the hob is sufficiently cool:** limescale rings, water rings, fat stains, shiny metallic discolouration. Clean the hob with a moist cloth and a non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.
- **Remove shiny metallic discolouration:** use a solution of water with vinegar and clean the glass surface with a cloth.

9. OVEN - DAILY USE

WARNING!

Refer to Safety chapters.

9.1 Oven functions

WARNING!

Do not pour any liquids into the cavity embossment before and during the cooking process. There is a risk of damage.



Off position

The oven is off.



Fast grilling

To grill thin pieces of food in large quantities and to toast bread.



Conventional cooking

To bake and roast food on one shelf position.



True fan cooking

To bake on maximum two shelf positions simultaneously and to dry food.
Set the temperature 20 - 40 °C lower than for Conventional cooking.

	Pizza function To bake pizza and other dishes that require more heat from below.
	Browning To roast larger meat joints or poultry with bones on one shelf position. Also to make gratin and to brown.
	Drying To dry sliced fruit, vegetables and mushrooms.
	Turbo grilling To roast larger meat joints or poultry with bones on one shelf position. Also to make gratin and to brown.
	Moist fan baking This function was used to comply with the Energy Efficiency Class and Ecodesign Regulations (according to EU 65/2014 and EU 66/2014). Tests according to: IEC/EN 60350-1. It is designed to save energy during cooking. The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced. For general energy saving recommendations refer to "Energy Efficiency" chapter, Energy Saving. For the cooking instructions refer to "Hints and tips" chapter, Moist fan baking. When you use this function the lamp automatically turns off.
	Function lock To lock the oven functions.

9.2 Activating and deactivating the oven



It depends on the model if your appliance has knob symbols, indicators or lamps:

- The indicator comes on when the oven heats up.
- The lamp comes on when the oven operates.
- The symbol shows whether the knob controls one of the cooking zones, the oven functions or the temperature.

1. Turn the knob for the oven functions to select an oven function.
2. Turn the knob for the temperature to select a temperature.
3. To deactivate the oven turn the knobs for the oven functions and temperature to the off position.

9.3 Locking the oven

The knob for the oven functions has a built-in Function lock.



The Function lock does not deactivate the main power supply of the cooker.

Turn the knob to the symbol .

The knob comes out approximately 2 mm.

Unlocking the oven: Press the knob and turn it to the necessary position.

9.4 Cooling fan

When the oven operates, the cooling fan turns on automatically to keep the surfaces of the oven cool. If you turn off the oven, the cooling fan continues to operate until the oven cools down.

9.5 Using the core temperature sensor

The core temperature sensor measures the core temperature of the meat.

There are two temperatures to be set:


- The oven temperature. Refer to the table for roasting.
- The core temperature. Refer to the table for the core temperature sensor.



CAUTION!

Only use the core temperature sensor supplied with the appliance, or genuine replacement parts.

1. Put the point of the core temperature sensor into the centre of the meat.
2. Put the plug of the core temperature sensor into the socket on the front of the appliance. The indicator for the core temperature sensor  flashes.

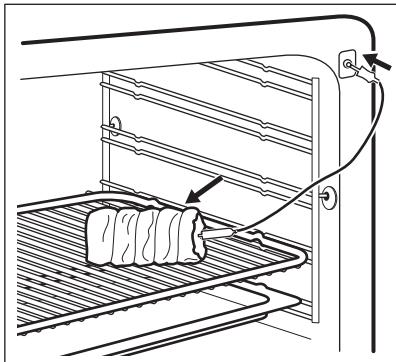

3. Press the button or to set the core temperature.
You can set the temperature from 30 °C to 99 °C. Refer to values in the table.
4. Set the oven function and the oven temperature.
5. Press a button to stop the signal.
An acoustic signal sounds for two minutes, when the meat is at the set core temperature.
6. Deactivate the appliance.
7. Remove the plug of the core temperature sensor from the socket. Remove the meat from the appliance.

If the meat is not cooked to your satisfaction, do the above steps again and set a higher core temperature.

You can change the temperature at any time during the cooking. Press to change the set core temperature.




WARNING!

Be careful when you remove the tip and plug of the core temperature sensor. The core temperature sensor is hot. There is a risk of burns.

9.6 Inserting the oven accessories


Deep pan / Baking tray:

Push the deep pan or baking tray between the guide bars of the shelf support.

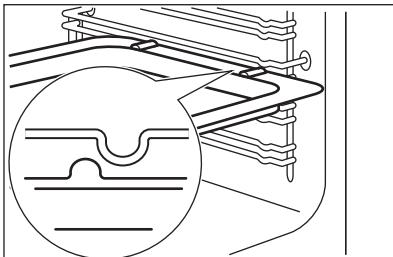

Wire shelf:


Push the shelf between the guide bars of the shelf support.

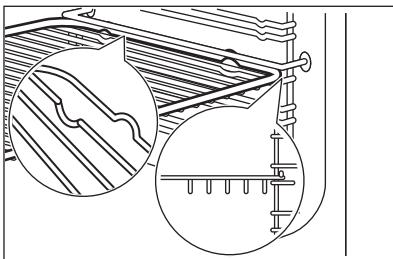

- All accessories have small indentations at the top of the right and left side to increase safety. The indentations are also anti-tip devices.
- The high rim around the shelf is a device which prevents cookware from slipping.

10. OVEN - CLOCK FUNCTIONS

10.1 Display

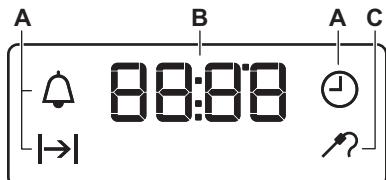

- A. Clock functions
- B. Timer
- C. Food sensor indicator

10.2 Buttons

Button	Function	Description
—	MINUS	To set the time.
⌚	CLOCK	To set a clock function.
+	PLUS	To set the time.

10.3 Clock functions

Clock function	Application
⌚	TIME OF DAY
→	DURATION
🔔	MINUTE MINDER

10.4 Setting the DURATION

1. Set an oven function and temperature.
2. Press ⌚ again and again until →| starts to flash.
3. Press + or — to set the DURATION time.

The display shows →|.

4. When the time ends, →| flashes and an acoustic signal sounds. The appliance deactivates automatically.
5. Press any button to stop the acoustic signal.

6. Turn the knob for the oven functions and the knob for the temperature to the off position.

10.5 Setting the MINUTE MINDER

1. Press ⌚ again and again until →| starts to flash.
2. Press + or — to set the necessary time. The Minute Minder starts automatically after 5 seconds.
3. When the set time ends, an acoustic signal sounds. Press any button to stop the acoustic signal.

4. Turn the knob for the oven functions and the knob for the temperature to the off position.

10.6 Cancelling the clock functions

1. Press the  again and again until the necessary function indicator starts to flash.

2. Press and hold .

The clock function goes out after some seconds.

11. OVEN - HINTS AND TIPS

WARNING!

Refer to Safety chapters.



The temperature and baking times in the tables are guidelines only. They depend on the recipes and the quality and quantity of the ingredients used.

11.1 Baking

For the first baking, use the lower temperature.

11.2 Tips on baking

Baking results	Possible cause	Remedy
The bottom of the cake is not baked sufficiently.	The shelf position is incorrect.	Put the cake on a lower shelf.
The cake sinks and becomes soggy or streaky.	<p>The oven temperature is too high.</p> <p>The oven temperature is too high and the baking time is too short.</p>	<p>Next time set slightly lower oven temperature.</p> <p>Next time set a longer baking time and lower oven temperature.</p>
The cake is too dry.	<p>The oven temperature is too low.</p> <p>The baking time is too long.</p>	<p>Next time set higher oven temperature.</p> <p>Next time set shorter baking time.</p>
The cake bakes unevenly.	<p>The oven temperature is too high and the baking time is too short.</p> <p>The cake batter is not evenly distributed.</p>	<p>Next time set a longer baking time and lower oven temperature.</p> <p>Next time spread the cake batter evenly on the baking tray.</p>
The cake is not ready in the baking time specified in a recipe.	The oven temperature is too low.	Next time set a slightly higher oven temperature.

11.3 True fan cooking: Baking

Food	Temperature (°C)	Time (min)	Shelf position
Bread rolls	175 - 185	15 - 20	2 + 4
Wholemeal rolls	165 - 180	20 - 30	2 + 4
Filled sandwiches	170 - 180	15 - 20	2 + 4
Pan loaf	170 - 190	30 - 40	1 + 4
Pretzels	160 - 170	15 - 20	2 + 4
White loaf / Round loaf	170 - 180	35 - 45	2 + 4
Wholemeal loaf	160 - 170	35 - 45	2 + 4
Rye bread, mix	250	-	2 + 4
- baking	160 - 170	60 - 70	2 + 4
Baguettes	180 - 200	20 - 30	2 + 4
Pancakes	150 - 160	50 - 60	3
Fruit cakes	140 - 150	70 - 80	3
Muffins	160 - 170	15 - 25	2 + 4
Jam roll	190 - 210	6 - 15	3
Buns	185 - 195	8 - 15	2 + 4
Long loaf	170 - 180	25 - 35	2 + 4
Gingerbread	160 - 170	8 - 15	2 + 4
Dish cake	150 - 160	30 - 40	2 + 4
Sponge cakes / Madeira cakes	150 - 160	50 - 60	2
Meringues	90 - 110	90 - 120	2 + 4
Meringue bases	90 - 110	90 - 120	2 + 4
Biscuits	150 - 160	10 - 20	2 + 4
Choux pastry	155 - 165	30 - 40	2 + 4
Fruit tarts, short crust pastry	150 - 160	pre-baking, bases 10 - 15	2 + 4
Fruit tarts, short crust pastry	150 - 160	finishing 35 - 45	2 + 4
Fruit tarts, crumble pastry	170 - 180	30 - 40	2 + 4

11.4 True fan cooking

Food	Temperature (°C)	Time (min)	Shelf position
Fish, boiling	150 - 160	~1)	2 + 4
Fish, frying	165 - 175	~1)	2 + 4
Meatloaf	165 - 175	60 - 70	2 + 4
Danish meatballs	165 - 175	35 - 45	2 + 4
Liver pâté	165 - 175	65 - 75	2 + 4
Potato gratin	170 - 190	55 - 65	2 + 4
Lasagne, home made	170 - 190	60 - 70	2 + 4
Lasagne, frozen	170 - 190	30 - 45 ²⁾	2 + 4
Pasta gratin	165 - 175	40 - 50	2 + 4
Chips, frozen	180 - 200	30 - 45 ²⁾	2 + 4
Tarts, home made - pre-baking, roll	165 - 175	15 - 20	2 + 4
Tarts, home made - finishing	165 - 175	30 - 40	2 + 4
Tarts, frozen	170 - 190	25 - 35 ²⁾	2 + 4

1) When frying or boiling fish, the cooking time depends on the thickness of the fish. The fish is finished when the flesh is white. Test by sticking a fork into the fish. If the flesh comes easily away from the bone, the fish is cooked.

2) With cooking on two levels (double portion) the time is around 1/3 longer than that stated on the packaging. If the time given is 30 mins, then the preparation time will be around $30 + 10 = 40$ min.

11.5 Conventional cooking: Baking

Food	Temperature (°C)	Time (min)	Shelf position
Bread rolls	200 - 225	8 - 12	3 - 4
Wholemeal rolls	190 - 200	20 - 25	3 - 4
Filled sandwiches	200 - 225	10 - 12	3 - 4
Ciabatta rolls	210 - 230	10 - 20	3 - 4
Foccacia	220 - 230	15 - 20	3 - 4
Pita bread	250	5 - 15	3 - 4
Pretzels	180 - 200	12 - 15	3 - 4
White loaf	190 - 210	25 - 40	1 - 2
Ciabatta	210 - 220	15 - 25	1 - 2
Wholemeal loaf	180 - 200	35 - 45	1 - 2

Food	Temperature (°C)	Time (min)	Shelf position
Rye bread baking	180 - 200	55 - 65	1
- baking	190	55 - 65	1
Baguettes	220 - 230	15 - 30	3 - 4
Pancake	170 - 180	50 - 60	2 - 3
Dish cake	170 - 180	35 - 45	3 - 4
Sponge cakes / Madeira cakes	170 - 180	40 - 50	1 - 2
Sandwich cake, roll	200 - 225	8 - 12	3 - 4
Meringues	90 - 110	90 - 120	3 - 4
Meringue bases	90 - 110	90 - 120	3 - 4
Biscuits	160 - 180	6 - 15	3 - 4
Choux pastry	170 - 190	30 - 45	3 - 4
Swiss rolls	190 - 210	10 - 12	3 - 4
Fruit tarts, short crust pastry	175 - 200	pre-baking, roll 10 - 15	3 - 4
Fruit tarts, short crust pastry	170 - 180	finishing 35 - 45	3 - 4
Fruit tarts, crumble pastry	190 - 200	25 - 35	3 - 4
Marzipan ring cake	210 - 230	10 - 12	2

11.6 Conventional cooking □

Food	Temperature (°C)	Time (min)	Shelf position
Fish, boiling	160 - 170	1)	3
Fish, frying	180 - 200	1)	3
Meatloaf	175 - 200	45 - 60	3
Danish meatballs	175 - 200	30 - 45	3
Liver pâté	180 - 200	50 - 60	3
Gratin	180 - 200	50 - 60	3
Potato gratin	190 - 210	55 - 65	3
Lasagne, home made	190 - 210	50 - 60	3
Lasagne, frozen	175 - 200	30 - 45 ²⁾	3
Pasta gratin	180 - 200	30 - 40	3
Chips, frozen	225 - 250	20 - 30 ²⁾	3

Food	Temperature (°C)	Time (min)	Shelf position
Tarts, home made - pre-baking, roll	190 - 210	15 - 25	3
Tarts, home made - finishing	190 - 210	20 - 30	3
Tarts, frozen	200 - 225	20 - 30 ²⁾	3

1) When frying or boiling fish, the cooking time depends on the thickness of the fish. The fish is finished when the flesh is white. Test by sticking a fork into the fish. If the flesh comes easily away from the bone, the fish is cooked.

2) With cooking on two levels (double portion) the time is around 1/3 longer than that stated on the packaging. If the time given is 30 min, then the preparation time will be around $30 + 10 = 40$ min.

11.7 Pizza function

Food	Temperature (°C)	Time (min)	Shelf position
Ciabatta rolls	200 - 220	10 - 20	2
Foccacia	220 - 230	10 - 20	2
Ciabatta	190 - 200	15 - 25	2
Fruit tarts, short crust pastry	170 - 180	35 - 45	2
Fruit tarts, crumble pastry	175 - 200	25 - 35	2
Pizza, home made (thick - with a lot of topping)	180 - 200	25 - 35	1
Pizza, home made (thin crust)	200 - 230 ¹⁾	15 - 20	1
Pizza, frozen	190 - 200	15 - 20	3
Tarts, home made pre-baking, roll	175 - 200	35 - 45	3
Tarts, home made finishing	175 - 200	35 - 45	3
Tarts, frozen	190 - 210	15 - 25	3

1) Preheat the oven.

11.8 Moist fan baking

Bread and pizza

Food	Temperature (°C)	Time (min)	Shelf position
Buns	180	25 - 35	3
Frozen pizza 350 g	190	25 - 35	3

Cakes in baking tray

Food	Temperature (°C)	Time (min)	Shelf position
Swiss roll	180	20 - 30	3
Brownie	180	30 - 40	3

Cakes in tin

Food	Temperature (°C)	Time (min)	Shelf position
Soufflè	200	30 - 40	3
Sponge flan base	180	20 - 30	3
Victoria sandwich	150	25 - 35	3

Fish

Food	Temperature (°C)	Time (min)	Shelf position
Fish in pouches 300 g	180	25 - 35	3
Whole fish 200 g	180	25 - 35	3
Fish fillet 300 g	180	25 - 35	3

Meat

Food	Temperature (°C)	Time (min)	Shelf position
Meat in pouch 250 g	200	25 - 35	3
Meat skewers 500 g	200	30 - 40	3

Small baked items

Food	Temperature (°C)	Time (min)	Shelf position
Cookies	180	25 - 35	3
Macaroons	160	25 - 35	3
Muffins	180	25 - 35	3
Savoury cracker	170	20 - 30	3
Short crust pastry biscuits	150	25 - 35	3
Tartelettes	170	15 - 25	3

Vegetarian

Food	Temperature (°C)	Time (min)	Shelf position
Mixed vegetables in pouch 400 g	180	25 - 35	3
Omelette	200	20 - 30	3
Vegetables on tray 700 g	180	25 - 35	3

11.9 Tips on Roasting

Use heat-resistant ovenware.

Roast lean meat covered (you can use aluminium foil).

Roast large meat joints directly in the tray.

Put some water in the tray to prevent dripping fat from burning.

Turn the roast after 1/2 - 2/3 of the cooking time.

Roast meat and fish in large pieces (1 kg or more).

If level one is suggested put the food directly on the baking tray

Baste meat joints with their own juice several times during roasting.

11.10 True fan cooking : Roasting

Beef

Food	Temperature (°C)	Time (min / kg)	Shelf position
Roast beef ¹⁾	125	80 - 120	2 - 3
Rump steak - browning	200	total 10	2 - 3
Rump steak - roasting	150	50 - 60	2 - 3
Roast beef	160	90 - 120	1 - 2

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

Veal

Food	Temperature (°C)	Time (min / kg)	Shelf position
Fillet of beef ¹⁾	160	60 - 70	2 - 3

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

Lamb

Food	Temperature (°C)	Time (min / kg)	Shelf position
Leg / shoulder / saddle	160	80 - 100	2

Pork

Food	Temperature (°C)	Time (min / kg)	Shelf position
Roast pork ¹⁾	175	60 - 70	2 - 3
Pork loin ¹⁾	175	60	2 - 3
Neck fillets	160	90 - 120	2 - 3
Ham	150	60 - 100	1 - 2

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

Poultry

Food	Temperature (°C)	Time (min / kg)	Shelf position
Chicken, parted	180	55 - 65	2 - 3
Duck ¹⁾	150	55 - 65	2 - 3
Duck slow roasting ¹⁾	130	total around 5 hours	2 - 3

Food	Temperature (°C)	Time (min / kg)	Shelf position
Roast turkey, stuffed	150	50 - 60	1 - 2
Turkey breast	175	70 - 80	2 - 3

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

11.11 Conventional cooking: Roasting □

Beef

Food	Temperature (°C)	Time (min / kg)	Shelf position
Roast beef ¹⁾	125	80 - 120	2 - 3
Rump steak - browning	225	total 10	2 - 3
Rump steak - roasting	160	50 - 60	2 - 3
Roast beef	180	90 - 120	1 - 3

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

Veal

Food	Temperature (°C)	Time (min / kg)	Shelf position
Fillet of beef ¹⁾	180	60 - 70	2

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

Lamb

Food	Temperature (°C)	Time (min / kg)	Shelf position
Leg / shoulder / rib	180	80 - 100	2

Pork

Food	Temperature (°C)	Time (min / kg)	Shelf position
Roast pork ¹⁾	200	60 - 70	3
Pork loin ¹⁾	200	60	3
Neck fillets	180	90 - 120	3
Ham	160	60 - 100	2

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

Poultry

Food	Temperature (°C)	Time (min / kg)	Shelf position
Chicken, parted	200	55 - 65	2
Duck ¹⁾	160	55 - 65	2
Duck slow roasting ¹⁾	130	total around 5 hours	2
Roast turkey, stuffed	160	50 - 60	2
Turkey breast	200	70 - 80	2
Whole chicken	220	60 - 90	2

1) Other. Can be browned off after roasting under the grill or with top / bottom heat at 250°C. If you are using a meat probe, remove it before grilling.

11.12 Turbo grilling

Beef

Food	Quantity	Temperature (°C)	Time (min)	Shelf position
Roast beef or fillet: rare	per cm. of thickness	190 - 200 ¹⁾	5 - 6	1
Roast beef or fillet: medium	per cm. of thickness	180 - 190	6 - 8	1
Roast beef or fillet: well done	per cm. of thickness	170 - 180	8 - 10	1

1) Preheat the oven.

Pork

Food	Quantity	Temperature (°C)	Time (min)	Shelf position
Shoulder, neck, ham joint	1 - 1.5 kg	160 - 180	90 - 120	1
Chop, spare rib	1 - 1.5 kg	170 - 180	60 - 90	1
Meat loaf	750 g - 1 kg	160 - 170	50 - 60	1
Pork knuckle (pre-cooked)	750 g - 1 kg	150 - 170	90 - 120	1

Veal

Food	Quantity	Temperature (°C)	Time (min)	Shelf position
Roast veal	1 kg	160 - 180	90 - 120	1
Knuckle of veal	1.5 - 2 kg	160 - 180	120 - 150	1

Lamb

Food	Quantity	Temperature (°C)	Time (min)	Shelf position
Leg of lamb, roast lamb	1 - 1.5 kg	150 - 170	100 - 120	1

Food	Quantity	Temperature (°C)	Time (min)	Shelf position
Saddle of lamb	1 - 1.5 kg	160 - 180	40 - 60	1

Poultry

Food	Quantity	Temperature (°C)	Time (min)	Shelf position
Poultry portions	200 - 250 g each	200 - 220	30 - 50	1
Duck	1.5 - 2 kg	180 - 200	80 - 100	1
Goose	3.5 - 5 kg	160 - 180	120 - 180	1
Turkey	2.5 - 3.5 kg	160 - 180	120 - 180	1
Turkey	4 - 6 kg	140 - 160	150 - 240	1
Whole chicken	1 - 1.5 kg	180 - 200	60 - 90	2

11.13 Browning

Food	Temperature (°C)	Time (min)	Accessories	Shelf position
Lasagna, 1 square baking dish on the grid	190 - 210	50 - 60	Grid	1
Quiche Lorraine, 1 tin (ø 24 cm) on the grid	190 - 210	50 - 60	Grid	1
Pizza, homemade	220 - 240	25 - 35	Tray	1
Cheesecake on baking tray	170 - 190	55 - 65	Tray	1
Potato gratin, 1 baking dish (ø 22 cm) on the grid	180 - 190	70 - 80	Grid	2
Tomato gratin (half cut) 1)	190 - 210	45 - 55	Tray	2
Eggplant gratin (sliced) 2)	190 - 210	30 - 40	Grid	3
Seasoned bacon (whole piece, about 1,5kg, with salt)	210	120 - 130	Grid	4
Seasoned bacon (whole piece, about 1,5kg, with salt)	210	120 - 130	Tray	3
Fish fillet gratin (about 0.5 - 1 kg)	180 - 200	15 - 25	Tray	3

1) Preheat the oven.

2) Preheat the oven.

11.14 Core temperature sensor table

Beef

Food	Food core temperature (°C)	Shelf position
Roast beef	55 - 65	2 - 3
Rump steak - browning	55 - 65	2 - 3
Rump steak - roasting	55 - 65	2 - 3
Roast beef	75 - 80	1 - 2

Veal

Food	Food core temperature (°C)	Shelf position
Fillet of beef	65	2 - 3

Lamb

Food	Food core temperature (°C)	Shelf position
Leg / shoulder / saddle	90	2

Pork

Food	Food core temperature (°C)	Shelf position
Roast pork	80	2 - 3
Neck fillets	75 - 80	2 - 3
Ham	70 - 75	1 - 2

Poultry

Food	Food core temperature (°C)	Shelf position
Turkey breast	75 - 80	2 - 3


11.15 Grilling in general

WARNING!

Always grill with the oven door closed.

- **Always grill with the maximum temperature setting.**
- Set the shelf into the shelf position as recommended in the grilling table.
- If the first shelf position is recommended put the food directly on the baking tray.
- Always place the deep pan to collect fat on the first shelf position.

- Grill only flat pieces of meat or fish.

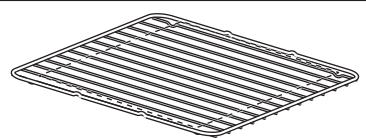

The grilling area is set in centre of the shelf.

11.16 Fast grilling

Food	Temperature (°C)	Time (min)		Shelf position
		1st side	2nd side	
Burgers	max 1)	9 - 15	8 - 13	4
Pork fillet	max	10 - 12	6 - 10	4
Sausages	max	10 - 12	6 - 8	4
Fillet steaks, veal steaks	max	7 - 10	6 - 8	4
Toast	max 1)	1 - 4	1 - 4	4 - 5
Toast with topping	max	6 - 8	-	4

1) Pre-heat the oven

11.17 Drying

Cover the oven shelves with baking parchment.

For best results: deactivate the appliance after half the time required. Open the

appliance door and let the appliance cool down. After that finish the drying process.

Vegetables

Food	Temperature (°C)	Time (h)	Shelf position	
			1 position	2 positions
Beans	60 - 70	6 - 8	3	2 / 4
Peppers	60 - 70	5 - 6	3	2 / 4
Vegetables for sour	60 - 70	5 - 6	3	2 / 4
Mushrooms	50 - 60	6 - 8	3	2 / 4
Herbs	40 - 50	2 - 3	3	2 / 4

Fruit

Food	Temperature (°C)	Time (h)	Shelf position	
			1 position	2 positions
Plums	60 - 70	8 - 10	3	2 / 4
Apricots	60 - 70	8 - 10	3	2 / 4
Apple slices	60 - 70	6 - 8	3	2 / 4
Pears	60 - 70	6 - 9	3	2 / 4

11.18 Information for test institutes

Food	Function	Tem- pera- ture (°C)	Time (min)	Accesso- ries	Shelf po- sition
Small cakes (20 small cakes per tray)	Conventional cooking	170	20 - 30	Tray	4
Small cakes (20 small cakes per tray) ¹⁾	True fan cooking	150	20 - 30	Tray	2
Small cakes (20 small cakes per tray) ¹⁾	True fan cooking	150	25 - 35	Tray / Drip- ping Pan	1 + 4
Apple pie, 2 tins (ø 20 cm) on the grid, diagonally shifted	Conventional cooking	180	70 - 90	Grid	1
Apple pie, 2 tins (ø 20 cm) on the grid, diagonally shifted	True fan cooking	160	70 - 90	Grid	2
Apple pie, 2 tins (ø 20 cm) on the grid, diagonally shifted	Pizza function	160	60 - 80	Grid	2
Fatless sponge cake, 1 tin (ø 26 cm) on the grid	Conventional cooking	170	30 - 40	Grid	3
Fatless sponge cake, 1 tin (ø 26 cm) on the grid	True fan cooking	150	35 - 45	Grid	2
Fatless sponge cake, 1 tin (ø 26 cm) on the grid ¹⁾	True fan cooking	160	25 - 35	Grid	1 + 4
Shortbread/Pastry strip	True fan cooking	140	20 - 35	Tray	3
Shortbread/Pastry strip	True fan cooking	140	20 - 30	Tray	1 + 4
Shortbread/Pastry strip	Conventional cooking	160	20 - 35	Tray	3
Toast ¹⁾	Fast grilling	Max	1 - 5	Grid	4
Beef burger	Grilling	Max	15 - 20 first side. 10 - 15 second side.	Grid / Drip- ping pan	4 + 1

¹⁾ Preheat the oven for 10 minutes.

12. OVEN - CARE AND CLEANING



WARNING!

Refer to Safety chapters.

12.1 Notes on cleaning

Cleaning Agents

- Clean the front of the appliance only with a microfibre cloth with warm water and a

mild detergent. Clean and check the door gasket around the frame of the cavity.

- Use a cleaning solution to clean metal surfaces.
- Clean stains with a mild detergent. Do not apply it on the catalytic surfaces.

Everyday Use

- Clean the cavity after each use. Fat accumulation or other residue may cause fire.
- Do not store food in the appliance for longer than 20 minutes. Dry the cavity only with a microfibre cloth after each use.

Accessories

- Clean all accessories after each use and let them dry. Use only a microfibre cloth with warm water and a mild detergent. Do not clean the accessories in a dishwasher.
- Do not clean the non-stick accessories using abrasive cleaner or sharp-edged objects.

12.2 Stainless steel or aluminium ovens

Clean the oven door with a damp cloth or sponge only. Dry it with a soft cloth.

Do not use steel wool, acids or abrasive materials as they can damage the oven surface. Clean the oven control panel with the same precautions.

12.3 Catalytic cleaning

⚠ CAUTION!

Do not clean the catalytic surface with oven sprays, soap or other cleaning agents. It will damage the catalytic surface.

⚠ CAUTION!

Always turn the oven light on while using the catalytic cleaning (if applicable).

⚠ WARNING!

Keep children away when you clean the oven at a high temperature. The oven surface becomes very hot and there is a risk of burns.



Spots or discolouration of the catalytic surface have no effect on catalytic properties.



Before activating the catalytic cleaning remove all the accessories from the oven.

The walls with catalytic coating are self-cleaning. They absorb fat which collects on the walls while the appliance operates.


To support the self-cleaning procedure, heat the empty oven on a regular basis.

1. Clean the oven floor with warm water and washing-up liquid, then dry it.
2. Set the function.
3. Set the oven temperature to 250 °C and let the oven operate for 1 hour.
4. When the appliance is cool, clean it with a soft and moist sponge.


12.4 Removing the shelf supports

To clean the oven, remove the shelf supports.

1. Pull the front of the shelf support away from the side wall.

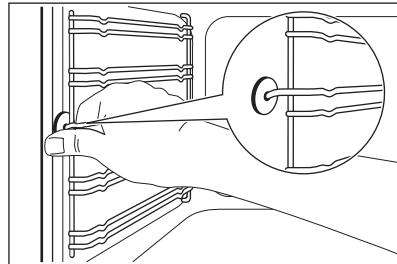

2. Pull the rear end of the shelf support away from the side wall and remove it.

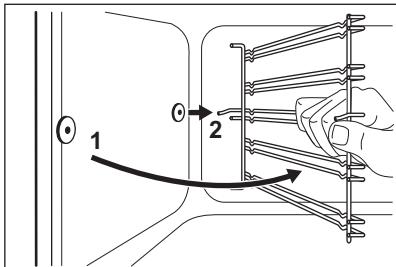


Install the shelf supports in the opposite sequence.

CAUTION!

Make sure that the longer fixing wire is in the front. The ends of the two wires must point to the rear. Incorrect installation can cause damage to the enamel.

12.5 Removing the oven door

To make the cleaning easier, remove the door.

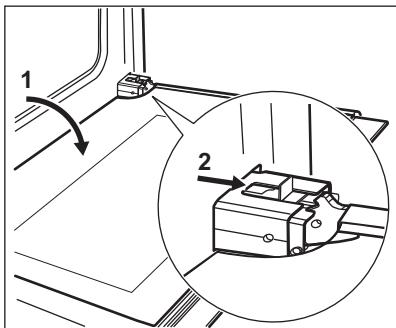

1. Open the door fully.
2. Move the slider until you hear a click.
3. Close the door until the slider locks.
4. Remove the door.

To remove the door, pull the door outwards first from one side, and then the other.


When the cleaning procedure is completed, insert the oven door in the opposite sequence. Make sure that you hear a click when you insert the door. Use force if necessary.

12.6 Removing and cleaning the door glasses




The door glass in your product can be different in type and shape from the examples you see in the images. The number of glasses can also be different.

1. Hold the door trim B on the top edge of the door at the two sides and push inwards to release the clip seal.

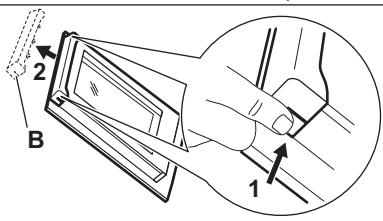

2. Pull the door trim to the front to remove it.
3. Hold the door glass panels on their top edge one by one and pull them upwards from the guide.

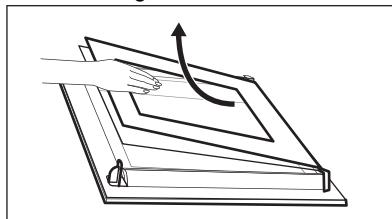

4. Clean the door glass panels. To install panels, do the same steps in reverse.

12.7 Replacing the lamp



WARNING!
Risk of electric shock.
The lamp can be hot.

1. Turn off the oven. Wait until the oven is cold.
2. Disconnect the oven from the mains.
3. Put a cloth on the bottom of the cavity.

The back lamp




The lamp glass cover is at the back of the cavity.

1. Turn the lamp glass cover counterclockwise to remove it.
2. Clean the glass cover.
3. Replace the oven lamp with a suitable 300 °C heat-resistant oven lamp. Use the same oven lamp type.
4. Install the glass cover.

The side lamp

Find the lamp glass cover at the left side of the cavity.

1. Remove the left shelf support to get access to the lamp.
2. Use a narrow, blunt object (e.g. a teaspoon) to remove the glass cover.

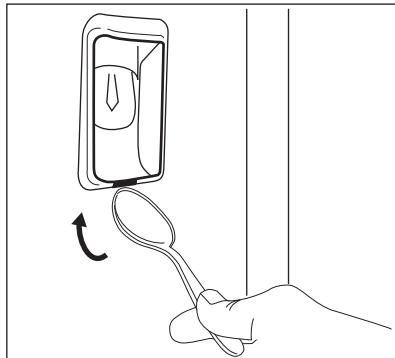

3. Clean the glass cover.
4. Replace the lamp with a suitable 300 °C heat-resistant lamp.
5. Install the glass cover.
6. Install the left shelf support.

12.8 The drawer



WARNING!
Do not put food inside the drawer.



WARNING!
Do not keep flammable items such as cleaning materials, plastic bags, oven gloves, paper, cleaning products, aerosols, plastic items) in the drawer. When you use the oven, the drawer can become hot. There is a risk of fire.

The drawer below the oven can be removed for cleaning.

Removing the drawer:

1. Pull the drawer out until it stops.
2. Lift the drawer slightly, so that can be lifted upwards at an angle of the drawer guides.

To install the drawer, follow the procedure in reverse.

13. TROUBLESHOOTING



WARNING!

Refer to Safety chapters.

13.1 What to do if...

Problem	Possible cause	Remedy
You cannot activate the appliance.	The appliance is not connected to an electrical supply or it is connected incorrectly.	Check if the appliance is correctly connected to the electrical supply.
You cannot activate the appliance.	The fuse is blown.	Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician.
You cannot activate or operate the hob.	You touched 2 or more sensor fields at the same time.	Touch only one sensor field.
You cannot activate or operate the hob.	There is water or fat stains on the control panel.	Clean the control panel.
An acoustic signal sounds and the hob deactivates. An acoustic signal sounds when the hob is deactivated.	You put something on one or more sensor fields.	Remove the object from the sensor fields.
The hob takes too long to heat up cookware.	Wrong diameter or quality of the cookware.	Use cookware dedicated for induction with bottom diameter similar to the size of the cooking zone
Residual heat indicator does not come on.	The zone is not hot because it operated only for a short time.	If the zone operated sufficiently long to be hot, speak to an Authorised Service Centre.
Automatic Heat Up function does not operate.	The zone is hot.	Let the zone become sufficiently cool.
Automatic Heat Up function does not operate.	The highest heat setting is set.	The highest heat setting has the same power as the function.
The heat setting changes between two levels.	Power management function operates.	Refer to "Hob - Daily use" chapter.
The sensor fields become hot.	The cookware is too large or you put it too near to the controls.	Put large cookware on the rear zones if possible.
There is no signal when you touch the panel sensor fields.	The signals are deactivated.	Activate the signals. Refer to "Hob - Daily use" chapter.
<input type="checkbox"/> comes on the hob display.	Automatic Switch Off operates.	Deactivate the hob and activate it again.
<input type="checkbox"/> L comes on the hob display.	The Child Safety Device or the Lock function operates.	Refer to "Hob - Daily use" chapter.
<input type="checkbox"/> F comes on the hob display.	There is no cookware on the zone.	Put cookware on the zone.
<input type="checkbox"/> F comes on the hob display.	The cookware is incorrect.	Use the correct cookware. Refer to "Hob - Hints and tips" chapter.
<input type="checkbox"/> F comes on the hob display.	The diameter of the bottom of the cookware is too small for the zone.	Use cookware with correct dimensions. Refer to "Hob - Hints and tips" chapter.
The oven does not heat up.	The oven is deactivated.	Activate the oven.

Problem	Possible cause	Remedy
The oven does not heat up.	The clock is not set.	Set the clock.
The oven does not heat up.	The necessary settings are not set.	Make sure that the settings are correct.
The lamp does not operate.	The lamp is defective.	Replace the lamp.
The display shows "12.00".	There was a power cut.	Reset the clock.
The display shows F11.	The plug of the core temperature sensor is not correctly installed into the socket.	Put the plug of the core temperature sensor as far as possible into the socket.
Steam and condensation settle on the food and in the cavity of the oven.	You left the dish in the oven for too long.	Do not leave the dishes in the oven for longer than 15 - 20 minutes after the cooking process ends.

13.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the appliance cavity. Do not remove the rating plate from the appliance cavity.

We recommend that you write the data here:

Model (MOD.)

Product number (PNC)

Serial number (S.N.)

14. ENERGY EFFICIENCY

14.1 Product Information according to EU Ecodesign Regulations for Hob

Model identification	LKI74440SW LKI74440SX	
Type of hob	Hob inside Freestanding Cooker	
Number of cooking zones	4	
Heating technology	Induction	
Diameter of circular cooking zones (Ø)	Left front	21.0 cm
	Left rear	14.0 cm
	Right front	18.0 cm
	Right rear	18.0 cm
Energy consumption per cooking zone (EC electric cooking)	Left front	178.0 Wh/kg
	Left rear	179.0 Wh/kg
	Right front	181.0 Wh/kg
	Right rear	181.0 Wh/kg
Energy consumption of the hob (EC electric hob)	179.8 Wh/kg	

IEC/EN 60350-2 - Household electric cooking appliances - Part 2: Hobs - Methods for measuring performance.

14.2 Hob - Energy saving

You can save energy during everyday cooking if you follow the hints below.

- When you heat up water, use only the amount you need.
- If it is possible, always put the lids on the cookware.

- Put the cookware directly in the centre of the cooking zone.
- Use the residual heat to keep the food warm or to melt it.

14.3 Product Information Sheet and Product Information according to EU Energy Labelling and Ecodesign Regulations for Oven

Supplier's name	Electrolux	
Model identification	LKI74440SW 947941536 LKI74440SX 947941537	
Energy Efficiency Index	95.3	
Energy efficiency class	A	
Energy consumption with a standard load, conventional mode	0.95 kWh/cycle	
Energy consumption with a standard load, fan-forced mode	0.82 kWh/cycle	
Number of cavities	1	
Heat source	Electricity	
Volume	73 l	
Type of oven	Oven inside Freestanding Cooker	
Mass	LKI74440SW	64.5 kg
	LKI74440SX	65.0 kg

IEC/EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.

14.4 Oven - Energy saving

Following tips below will help you save energy when using your appliance.

Make sure that the appliance door is closed when the appliance operates. Do not open the appliance door too often during cooking. Keep the door gasket clean and make sure it is well fixed in its position.

Use metal cookware and dark, non-reflective tins and containers to improve energy saving.

Do not preheat the appliance before cooking unless specifically recommended.

Keep breaks between baking as short as possible when you prepare a few dishes at one time.

Cooking with fan

When possible, use the cooking functions with fan to save energy.

Residual heat

When the cooking duration is longer than 30 min, reduce the appliance temperature to minimum 3 - 10 min before the end of cooking. The residual heat inside the appliance will continue to cook.

Use the residual heat to keep the food warm or warm up other dishes.

Keep food warm

Choose the lowest possible temperature setting to use residual heat and keep the food warm.

Moist fan baking

Function designed to save energy during cooking.

14.5 Product Information for power consumption and maximum time to reach applicable low power mode

Power consumption in standby	0.8 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	20 min

15. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol  with

the household waste. Return the product to your local recycling facility or contact your municipal office.

Electrolux Appliances AB - Contact Address:
Al. Powstancow Śląskich 26, 30-570 Krakow,
Poland







electrolux.com

867363963-A-042025

